


VISIONQUEST

PVR5000

HDD DVD RECORDER

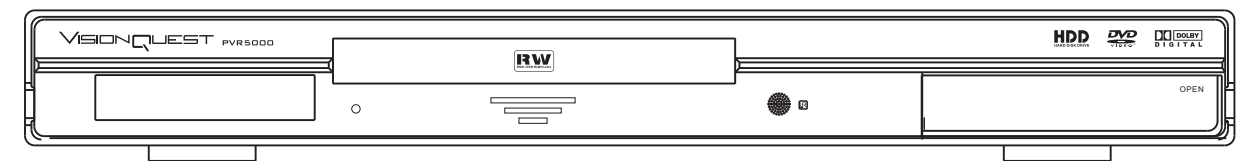

VISIONQUEST

VISIONQUEST

VISIONQUEST

VISIONQUEST

Technical Specifications

Technical Specifications

Audio Specifications	Output	Audio level:1.0~2.0 Vrms (10k ohm load) Frequency response: 4Hz~44KHz (2dB) S /N ratio ≥ 90dB Audio distortion+noise ≤ -65dB(1KHz)
	Input	Audio Level ≤ 2.0 Vrms (10k ohm Load)
General specifications	Power supply AC110-230V 50/60Hz Power consumption: ≤ 40W Standby power consumption: ≤ 3W Size: 430mmX48mmX308mm Weight Net: 4.65kg Gross: 5.3kg	
Working humidity	Relative humidity: 15~75%(without water condensation)	

Technical Specifications

Technical Specifications

Supported disc formats	DVD, DVD+R/RW, DVD-R/RW, SVCD, VCD, CD-DA, JPEG	
Supported recordable disc	DVD+R/RW, DVD-R/RW	
Recording format	DVD (MPEG-II)	
Recording quality	HQ(Perfect Quality), SP(Standard Play), SP+, EP(Extend Play), LP, SLP(Standard Long Play) .	
Input	Composite Video Input S-Video Input (Y+C) DV Input(1394) RF Input Analog Audio Input USB Input	
Output	Composite Video Output S-Video Output(Y+C) Component Video Output Analog 5.1-Channel Audio Output Digital Audio Coaxial Output Digital Audio Optical Output	
Input RF Features	System: PAL SECAM Impedance: 75 Ω imbalance coaxial cable	
Video Features	Output	Composite Video System: NTSC/PAL Video Level: 1.00.2Vp-p 75 Ω S-Video Y Output Level: 1.0 Vp-p 75 Ω C Output Level: 0.3 Vp-p 75 Ω Video Horizontal resolution: \geq 500 lines Y S/N 65dB
	Input	Composite Video System: NTSC/PAL Video Level: 1.00.2Vp-p 75 Ω S-Video Y Input Level: 1.0 Vp-p 75 Ω C Input Level: 0.3 Vp-p 75 Ω

Safety Instructions



Danger Symbol

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of dangerous voltage in the unit



Warning Symbol

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the manual accompanying the unit.

WARNING

To prevent fire or electric shock, do not expose the unit to rain or moisture. Never attempt to open the cabinet, dangerous high voltages are presented in the unit. Refer servicing to qualified service personnel when necessary.

Maintenance Notice

- Do not put the unit: near strong magnetic field, somewhere exposed to direct sunlight or near heat radiation equipment (such as a heater), at top of other heat radiation objects, in a place with bad ventilation and much dirt, somewhere subject to vibration and instability, somewhere exposed to moisture or rain. The unit shall be installed in a smooth and dry place with good ventilation.
- When the unit is moved from a cold place to a warm one, the laser head might get dewed and the unit might not work normally. In this case, keep the power on for an hour or two (with no disk loaded) before playing normally.
- Clean the surface of the unit with some neutral detergent. Do not use organic solvent such as alcohol or gasoline. Never polish the unit with sand paper.
- If the unit is not to be used for a long time, disconnect the power plug from the wall outlet. Note: Do not pull the power cord. When disconnect the unit from the wall outlet.
- For optimum performance, do not place heavy objects on the unit.

Caution

- The unit employs a laser system. To prevent direct exposure to the laser radiation, do not attempt to open the cabinet. Visible laser may radiate when the cabinet is opened or the interlocks are defeated.
- Do not stare into the laser beams.
- To ensure the proper use of the unit, read this manual carefully.
- Keep this manual properly for future reference. If the unit requires servicing, please contact the seller or our service center

Table of Contents

Basic Information

Features of the recorder	5
Terms	6

Identification of Controls

Front and Rear Panels	8
Remote Control	9
Installation and Remote Control Usage	10

System Connections

Connect to a TV	11
Connect to 5.1 channel amplifier	12
Connect to an amplifier with digital decoder	12
System connection for recording external signals	13

NAVIGATION Mode

Recording Mode

Introduction	14
Entering the recording mode and menu description	14
Manual Record	15
Recording to DVD or HDD	15
Recording Quality	15
One Touch Record (OTR)	16
DV Controlled Recording	16
Copy from HDD to Optical disc	16
Copy from Optical to HDD	17
PIP (Picture in Picture)	17
File manager	17

Timer Recording

Chapter Editing

Introduction	20
Entering the Chapter Editing mode	20
Menu description	20
Operation steps	20
Selecting the title to be edited	20
Split title	21
Chapter Marker	21
Hide/Unhide the title	21
Index Picture	21
Play	21
Exiting the Chapter Editing	21

Appendix (Troubleshooting Guide)

Before contacting service personnel, please check possible causes according to the following instructions.

Symptom	Possible Cause	Remedy
No Power	1.Power supply disconnected; 2.Bad contact between the power plug and the receptacle; 3. The power of the receptacle is switched off.	1. Connect to the power supply. 2. Plug again or replace the receptacle with a new one. 3. Switch on the receptacle.
No sound	1.Incorrect signal connection; 2.The disc is deformed or dirty; 3. The system is in the mute status.	1. Connect the signals properly. 2. Clean or fix the disc. 3. Press the “Mute” button.
No picture	1. Incorrect signal connection; 2. Incorrect TV status. 3. TV system out mode is Progressive, but your TV system is Interlace mode	1. Connect the signals properly. 2. Adjust the TV/AV status. 3. Press “PS/IS” to angle to mode.
No color	1. Wrong selection of TV system; 2. Improper color adjustment; 3. Incorrect video output settings	1. Set up the system by pressing the “System” button of the remote controller. 2. Readjust the color. 3. Check if the video output settings are correct.
Disc cannot be played	1. No disc in the drive; 2. Disc placed wrongly; 3. Moisture has condensed in the unit; 4. Not in a playing status; 5. Wrong disk format; 6. Disc is dirty.	1. Insert a disc; 2. Put the disc on the disc tray properly with the label side up. 3. Leave the unit on for about an hour (without disc) before using it again. 4. Press the “Play” button to switch to playing status. 5. Replace it with a supported disc. 6. Clean the disc with a soft cloth from the centre to the edge.
Remote controller malfunction	1. The remote controller is not directed at the sensor; 2. The receiving distance is more than 8 meters; 3. Low voltage of the RC batteries; 4. There is an obstacle between the unit and RC.	1. Direct the remote controller at the sensor. 2. Reduce the receiving distance. 3. Replace all the batteries. 4. Remove the obstacle.
Sudden malfunction	1. Bad disc quality; 2. Press other buttons by mistake; 3. Static from the outside.	1. Wait for 5~10 seconds and the playing will be restored. 2. Operate again. 3. Shut off the unit for 1-2 minutes and open it again.
Picture dividing	1. The selected system is incompatible with the disc;	1. Set up the correct system.
External signals cannot be recorded	1. Incorrect system connection; 2. No disc or non-recordable disc; 3. The disc has been finished; 4. There is no free space in the disc.	1. Connect properly. 2. Insert a recordable disc. 3. Change a disc. 4. Change a disc.
No monitoring signal	1. Input source not prepared; 2. Wrong video output system; 3. The actual input source is not consistent with the selected one.	1. Prepare the input source. 2. Switch the video output system. 3. Select a proper input source.
Timer recording cannot be done	1.The disc does not meet the requirement; 2. Wrong time settings (System Clock or Recording Time); 3. The input source doesn't work properly during the recording time; 4. System power failure.	1. Replace it with a new DVD+R or DVD+RW disc. 2. Set up the time again. 3. Ensure the input source work properly during the recording time. 4. Set the system to standby status.
Recording aborted halfway	1. There is no free space in the disc; 2. Bad disc quality.	1. Replace it with a blank disc. 2. Replace it with a high quality disc.

Basic Information

SETUP MENU -Time shift

Timeshift buffer length

In this “Timeshift buffer length” option, you can select 60 minutes, 180 minutes and 360 minutes difference option.

Timeshift default source:

Tuner(ON): When the system is turn on, it will enter the tuner and timeshift on state automatically.

FCVBS(OFF): It will enter FCVBS and timeshift OFF state automatically.

Timeshift buffer mode:

Use the arrow button to highlight the Time Shift buffer mode row, press select button to select Refresh or Preserve.

Refresh (or flush) mode refreshes the buffer upon changing the TV channel.

Preserve maintains the content of the buffer upon changing the TV channel.

NOTE: Refer to Time Shift introduction page for detailed explanation.

Space Management

Automatic: When Space Management is 'Automatic' and the HDD is full, the system should overwrite un-protected titles in FIFO scheme (the exception is when the title is selected to be dubbed - in which case, the title shall be kept until dubbing is over)

When Space Management is 'Manual' and the HDD is full. System will show the Popup message: The hard disk drive is full. Please erase some programs to perform further recording.

Empty hard disk

Erase all programs on HDD. A message will be shown: All video programs on the hard disk drive will be lost, the system must be restarted continue? GO, No (default)

Erase optical disc

Erase all programs on optical disc. A message will be shown: All video programs on the optical disc will be lost, continue? OK, No (default)

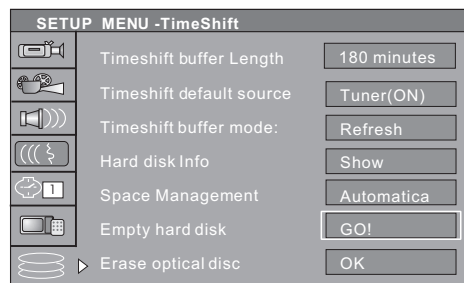
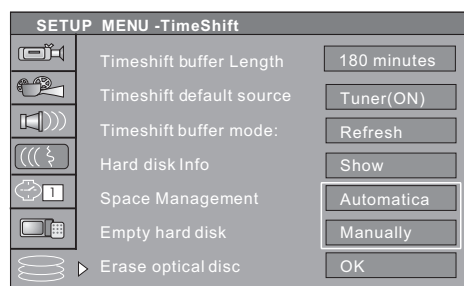
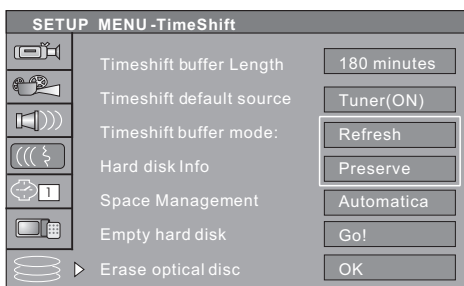
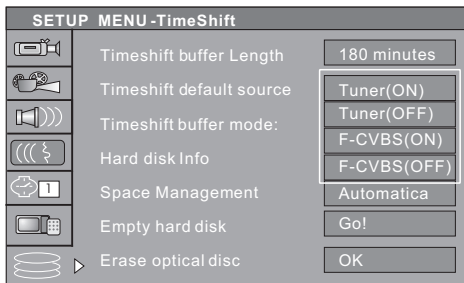
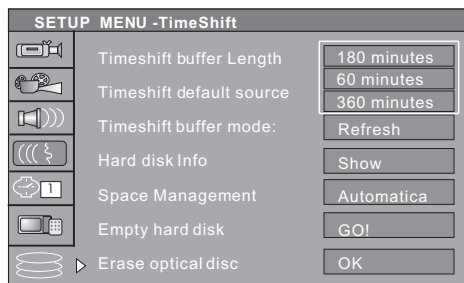


Table of Contents

HDD EDITING

HDD Editing	22
Delete	22
Split	22
Segment	22
Change Index Picture	23
Rename	23
Lock	24
Protect	24

Disc Operation

Introduction	25
Entering the Disc Operation mode	25
Menu Description	25
Operation Steps	25
Erase Optical Disc	25
Lock Disc	25
Rename Disc	26
Record a New Title	26
Overwrite Disc	26
Finalize Disc	26
EXIT	26

Title Editing

Introduction	27
Entering the Title Editing Mode	27

Play Mode

Entering the Play Mode	27
Menu Description	27
Operation	28
Direct Play	28
Entering the Title before Playing	29
Entering Menu before Playing	29
End Play	29
Play Mode Control	30
Normal Play	30
Repeat Play	30
Program Play	31
Random Play	31

Table of Contents

Play Process Control	32
Menu Operation	32
Forward Play	32
Back Play	32
Pause/Step Play	33
Volume Control	33
Selection Play Mode	33
Selection Play	34
Usage of the “GO TO” Button	35
Audio Selection	35
Audio Channel Selection	35
Subtitle Selection	36
Multi-angle Switch	36
PBC ON/OFF(Available only for VCD 2.0 or above versions)	36
Picture Zoom Function	36
Play a USB DISC	37
HDD Play mode	
HDD Playback	37
Time shifting introduction	38
System Setup	
Operation Interface and General Steps	41
Auto Chapter Marker	41
Record Quality	42
APS (Auto program scan)	42
Modify Channel	42
Program Table	42
Country Selection	44
SETUP MENU-VIDEO	44
SETUP MENU-AUDIO	45
SETUP MENU-LANGUAGE	46
SETUP MENU-DATE/TIME	47
SETUP MENU-PREFERENCES	48
SETUP MENU-Time shift	50
Appendix(Troubleshooting Guide)	51
Technical Specifications	52

System Setup

HDD To Disk Copy Option

In setup menu: with remote control arrow button, highlight the” HDD to Disk Copy Option” option, you may select fit to Disk. High speed and Highest speed mode.

Fit to Disk: If the select title do not fit on the DVD with the current bit-rate, the system should calculate if a lower bit rate will allow the recording to ‘fit’ on the available disk space. If so, there shall be a message:“The system has to process the video to enable recording on the current optical disk. During the copy operation, no other operation is allowed “Copying in progress....XX% has been completed. Press Stop to Abort”.

High speed: Copy from the HDD program content to optical disc, if the titles fit then copying is possible, if not put a message: “ Disk is full” . Combination fits on the disk, copying is possible. No further bit rate change is needed.

Highest speed: During ‘highest speed’ dubbing, if there is a timer recording, the following message should appear 3 minutes prior to the scheduled timer recording. “ A previously scheduled recording is about to start. This may reduce the dubbing speed. Press OK to accept the scheduled recording, press Cancel to ignore the scheduled recording and continue with highest speed dubbing”. Default value is OK and should be assumed if there is no response from the user up to 1 minute before the timer recording is due to start. If Ok is pressed or assumed, the system should continue dubbing and graciously reduce the speed to the maximum possible while timer recording is underway.

Change Password

1. To modify a password, use arrow buttons to select the “Change password” display chart. Press the “SELECT” button and a dialog box will pop up as shown in the right chart.
2. Use arrow buttons to select the “Enter password here” editor box, enter the password with the number buttons.
3. Use arrow buttons to select the “Input new password” editor box, input the new password with the number buttons. Then input the new password again with the number buttons in the “Input new again” edit box.
4. Use the arrow buttons to select the OK button.

After the setting of authorization level has been done, each time when the unit play a disc of such level, a password is required. If you forget the password, you can enter the super password.

Reset to Factory Default

1. In the General Settings menu, use the ▲ or ▼ button to select the “SELECT” button. The OSD will display as follows.
 2. Use the ▲ or ▼ button to select “OK” .
 3. Press the “SELECT” button to restore all default settings.
- When your unit doesn't work properly, it is possibly due to some wrong settings. Please try the “Reset to Factory Default” function to see if the unit can restore to its normal working status.

Screen Saver

The Screen Saver function means that when the unit is idle (or without monitored output) for some time, some interesting pictures will appear automatically on the screen as a screen saver.

1. In the General Settings menu, use the ▲ or ▼ button to move the cursor and select the “Screen Saver” item.
2. Press the “SELECT” button and the “Screen Saver” item will drop down a list as shown in the chart.
3. Use the ▲ or ▼ button to move the cursor, and select “ON” or “OFF” .
4. Press the “SELECT” button to activate or inactivate the Screen Saver function. When the screen saver appears, press any button to exit .
5. Press the “RETURN” button to return to the upper level menu and set up other items.

New Password

Enter password here.

Input new password.

Input new again.

OKCancel

Reset to Factory Defaults

System will reset all setup items to the default values. OK to confirm, Cancel to exit.

OKCancel

System Setup

SETUP MENU-DATE/TIME

Date(dd/mm/yy)

Press the **SETUP** button on the remote control to display the **SYSTEM SET-UP MENU**.

Use the **CURSOR** buttons of the remote control to select the Date(dd/mm/yy) and press the **SELECT** button to confirm.


Enter the correct date in mm/dd/yy format (Month/Day/Year) using the **0...9** keys.

Time(hh/mm)

Use the **CURSOR** button of the remote control to select **TIME** and press **SELECT** to confirm.

Enter the correct time in hh:mm:ss format (Hour: Minute: Seconds) using the **0...9** keys..

After the date and time have been entered, press the **SETUP** button on the remote control to exit.

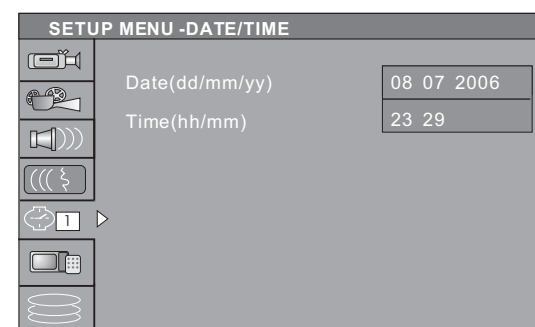

SETUP MENU - PREFERENCES

Parental Level

Setting authorization level and password of the unit renders some discs which contain restricted content playable only after the input of password. This function enables you to impose restrictions on the playing of some discs which are not suitable for children.


1. In the Play Settings menu, use the **▲** or **▼** button to move the cursor, select the “Parental Level” item, and press the “SELECT” button. Then the OSD displays:

2. Enter the password, and press the “SELECT” button. The TV screen will display the dialog box as shown in the right chart. The super password is 3308.

3. Select the “Parental Level” list box, and press the “Factory” button to drop down a menu as shown in the right chart.

4. Use the **▲** or **▼** button to select an authorization level (Off, 8: Adult...Safe) and press the “SELECT” button to confirm.

5. If the original password is not to be modified, use arrow buttons to select the “OK” button and press the “SELECT” button.

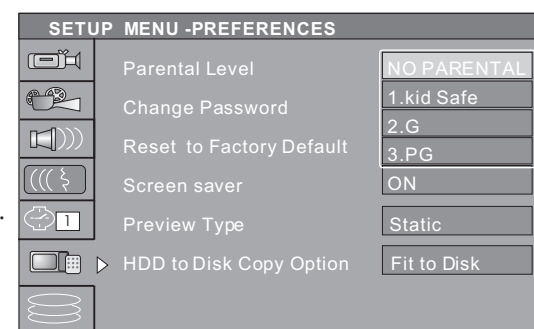

Preview Type

In the “Preview Type” option, with the remote control you may select the Static and Dynamic option. In set up menu select the “Static” option, the program title on the HDD title list is repose, select the “Dynamic” option the picture is sport.

Basic Information

Features of the recorder

The machine is capable of processing and recording various video signals into high quality DVD disks and HDD, such as the input signals of TV, ordinary disk player and DV.

In addition, the machine can be used as a DVD player of excellent performance. It has all the functions of an ordinary DVD player. The two-in-one function of the machine will increase your life quality and enhance your enjoyment of entertainment.

Permit multiple-signal input

- 1 Composite Video input
- 2 S-Video input
- 3 TV TUNER input
- 4 DV input
- 5 Analog audio input
- 6.USB input

Supply multiple-signal output

- 1 Composite Video output
- 2 S-video output
- 3 Component Video output
- 4 5.1 CH output
- 5 Optical / Coaxial output

Multiple DVD recording quality

The machine provides users with 6 recording qualities. And the resolution and recording time varies according to different recording qualities. You can balance between the high resolution against long recording time.

Multiple recording modes

The machine permits 3 modes of recording such as normal manual recording, timer recording and OTR, so as to facilitate your use.

Simple menu operation

The machine employs interface-friendly menu operation. You do not have to memorize the complicated functional keys and can finish most of operations using only several arrow keys and the select key.

Stand-by Function

Remote control stand-by function will make you use the machine more easily and freely. And it can help you finish timer recording in a power conserving manner.

Suitable for the following disks:

It can play DVD, DVD+R/RW, VCD, SVCD, CD-DA, Mixed CD-DA, MPEG 4(3.xx,4.xx,5.02,5.05), JPEG and so on multi format discs. It can record DVD+R/RW and DVD-R/RW disks.

Basic Information

Terms

HDD/DVD disk

HDD/DVD disk is a highly compact device for storing. The high quality audio and video information is stored in it after being compiled in MPEG-II format. There are 4 types of DVD disks such as bosseyed single-layer DVD-5 with the capacity of 4.7 GB, bosseyed bi-layer DVD-9 with the capacity of 8.5GB, double-faced singled-layer DVD-10 with the capacity of 9.46GB and double-faced bi-layer DVD-18with the capacity of 17GB.

DVD+RW disk

DVD+RW disk is also called DVD + Rewritable disk. It can be recorded for about 1000 times.

DVD+R disk

DVD+R disk is also called Write-one DVD disk. It can be recorded for only one time. The recorded disk can be played on other DVD player after being closed and then it can not be recorded again.

Erasing the disk

Erasing the disk means removing information stored on the optical disc or hard disc.

Compatibility (Finalize)

Compatibility (Finalize) means to process the information stored in the disk so as to make it compatible with other DVD players. Without this process, the disk can only be played on this machine. This function is relevant to DVD+R disks only.

Preparation for recording

Formal preparation for recording includes examining the eligibility of the disk and the recording format, doing necessary optical adaptation and prewriting the content area.

Recording quality

For DVD±R/RW disk with the capacity of 4.7 GB, there are 6 different recording quality in accordance with the compressing program.

SLP: Ordinary resolution, a bosseyed recordable DVD disk can record 6-hour programs

LP: Ordinary resolution, a bosseyed recordable DVD disk can record 4-hour programs

EP: Good resolution, a bosseyed recordable DVD disk can record 3-hour programs

SP+: Ordinary resolution, a bosseyed recordable DVD disk can record 2.5-hour programs

SP: Better resolution, a bosseyed recordable DVD disk can record 2-hour programs

HQ: Best resolution, a bosseyed recordable DVD disk can record 1-hour programs

Title

The images and music in the DVD disk are divided into several parts and the biggest unit for each part is title. For ordinary image of video software, it is film. And for ordinary music of audio software, it is music. Each title corresponds with a serial number so that it can be easily searched.


System Setup

Disc Menu Language

1. In the Language Settings menu, use the▲ or ▼ button to select the “ Disc Menu Language” item, and press the “SELECT” button to drop down a menu, as shown in the following chart.

2. Use the ▲ or ▼ button to select the language you want and press the “SELECT” button.

* The system will give priority to this setting as the DVD audio output language. If the DVD played does not support the selected language, the setting will be invalid.

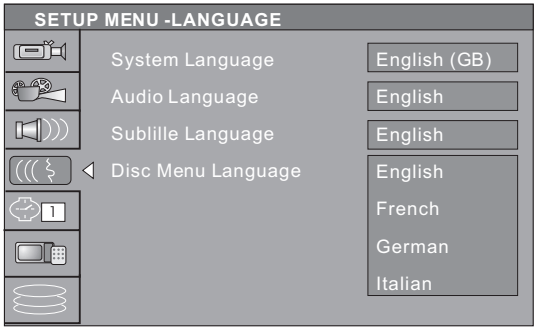

You can change the audio language at any time during playing.

See “Play Mode” for details.

3. Press the “RETURN” button to return to the upper level menu and set up other items.

Note

- For the DVD language settings in this section, some discs might not contain the language you set. In this case, your settings will be invalid. The language played will be the one that is provided by the disc.
- Some discs may contain a language selection menu, your selection in this menu rather than the corresponding settings of the unit will be effective.

LPCM Output

The unit can set the LPCM96K and LPCM48K difference Audio Sampling frequency.

Dynamic Range

The unit can set the “full →3/ 4 →1/ 2 →1/ 4→ off” value, You can select different value to compress Audio output range. You can feel the difference of Audio output effect under different values.

SETUP MENU -LANGUAGE

- 1. To satisfy the needs of consumers in different regions, the unit provides various interface languages.
 - 2. Enter the system setup mode.
- In the System Setup control bar menu, use the ▲ or ▼ button to move the cursor, select the “Language” item, and press the “SELECT” button to enter the Language Settings menu, which contains four items, as shown in the chart.


System Language

- 1. In the Language Settings menu, use the ▲ or ▼ button to select the “System Language” item, and press the “SELECT” button to drop down a menu.
- 2. Use the ▲ or ▼ button to select the language you want and press the “SELECT” button to confirm. The interface language will change immediately according to the settings.



Audio Language

- 1. In the Language Settings menu, use the ▲ or ▼ button to select the “Audio Language” item, and press the “SELECT” button to drop down a menu.
 - 2. Use the ▲ or ▼ button to select the language you want and press the “Select” button.
- * If you play a DVD disc supporting the selected language, the system will adopt that language as the DVD menu language.
- * If the disc doesn't support the selected language, the system will adopt the language provided by the disc.

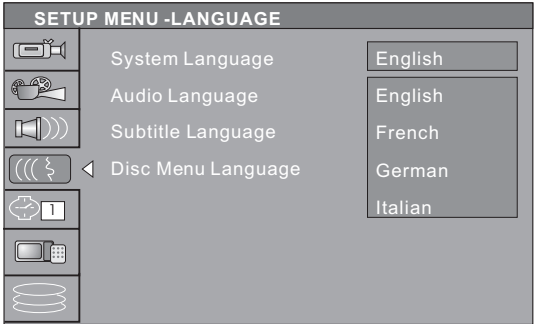

Subtitle Language

- Some DVD discs may contain various subtitle languages. This setting is to determine the default DVD subtitle language.
- 1. In the Language Settings menu, use the ▲ or ▼ button to select the “Subtitle Language” item, and press the “SELECT” button to drop down a menu.
 - 2. Use the ▲ or ▼ button to select the language you want and press the “SELECT” button.
- * “Off” means the subtitle output is off.
- * The system will give priority to this setting as the DVD subtitle language. If the DVD played does not support the selected language, the setting shall be invalid.
- * You can change the subtitle language at any time during playing. See “Play Mode” for details.

Terms(continued)

Chapter

It refers to the subtitle of the title of each division of the DVD image or music. Normally one title contains several chapters. And each chapter has its own mark number so that it can be searched easily.

Track

Music or image in CD-DA or VCD is divided into several areas. Each area is a track. Each track has its own mark number so that it can be searched easily.

Multiple angles function

Some DVDs record different images of one view taken from different angles.

Multiple languages function

Some DVDs record sound in several different languages. And the different languages can be released according to the corresponding function on the menu.

Multiple Subtitle function

Some DVDs record the picture description in multiple languages. Press the “SUBTITLE” key while watching, and record of subtitle in different languages will appear

Region code


- In order to protect intellectual property, the relevant organization has divided the world into 6 regions. And each region can only use DVD players and DVD disks with certain region code. The illustration on the right introduces the symbols of the six regions. The DVD players of one region cannot play the DVD disks of another one. The six regions are:
- A row of six circular icons, each containing a number from 1 to 6 and a globe symbol, representing the six DVD regions.
- 1 Canada, USA and its possessions.
 - 2 Japan, Europe, South Africa, Middle East (including Egypt)
 - 3 Southeast Asia, East Asia (including Hong Kong)
 - 4 Australia, New Zealand, Central America, Mexico, South America, Caribbean Sea
 - 5 Former USSR region, India, Africa (including South Korea and Mongolia)
 - 6 Mainland China

Progressive and Interlace

Interlace means a frame picture be scanned to two field, first scan odd field, then scan even field, the Images of resolution is ordinary. Progressive means a frame picture be scanned at one field, the images of resolution is higher, The machine provides both Progressive and Interlace modes.


Identification of Controls

FRONT PANEL

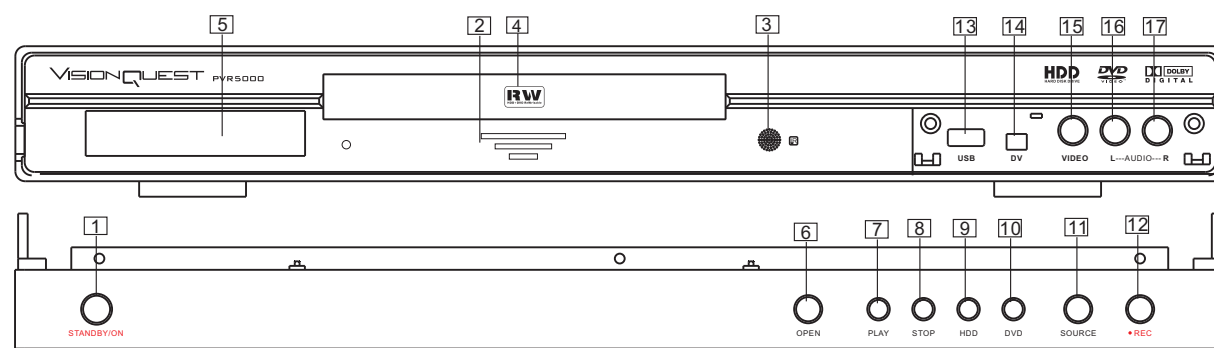

- | | |
|-----------------------|-------------------------------|
| 1. STANDBY/ON BUTTON | 10. DVD BUTTON |
| 2. STANDBY LED | 11. SOURCE BUTTON |
| 3. IR (REMOTE SENSOR) | 12. RECORD BUTTON |
| 4. DVD DOOR | 13. USB INPUT |
| 5. VFD DISPLAY | 14. DIGITAL VIDICON INPUT |
| 6. OPEN/CLOSE BUTTON | 15. VIDEO INPUT |
| 7. PLAY BUTTON | 16. AUDIO INPUT (FRONT RIGHT) |
| 8. STOP BUTTON | 17. AUDIO INPUT (FRONT LEFT) |
| 9. HDD BUTTON | |

REAR PANEL

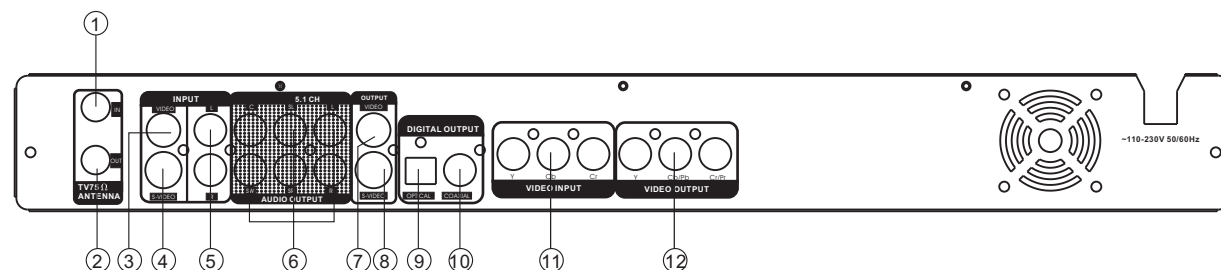


- | | |
|--|--|
| 1. RF SIGNAL INPUT | 7. COMPOSITE VIDEO OUTPUT |
| 2. RF SIGNAL OUTPUT | 8. S-VIDEO OUTPUT (REAR) |
| 3. COMPOSITE VIDEO INPUT (REAR) | 9. DIGITAL AUDIO- OPTICAL OUTPUT |
| 4. S-VIDEO INPUT | 10. DIGITAL AUDIO-COAXIAL OUTPUT |
| 5. AUDIO INPUT (REAR LEFT/RIGHT) | 11. COMPONENT VIDEOS INPUT
(Y, Cr, Cb) |
| 6. 5.1CH AUDIO OUTPUT
(L, R, SL, SR, C, SW) | 12. COMPONENT VIDEOS OUTPUT
(Y, Cr/Pr, Cb/Pb) |

System Setup


Video Output Format

- In the General Settings menu, use the ▲ or ▼ button to move the cursor, select the “Video Output Format” item and press the “SELECT” button.
 - Select the Progressive or Interlace option for video scan output mode, and press the “SELECT” button to confirm.
- * This function can do by pressing “PS/IS” button on the remote controller.

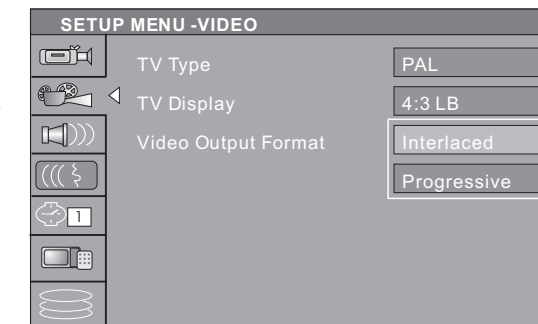

SETUP MENU - AUDIO

- Enter the System Setup control menu.
- Use the ▲ or ▼ button to select the “AUDIO” item.
- Press the “SELECT” button to enter the Play Setting mode. The following chart is the Play Setting main menu.

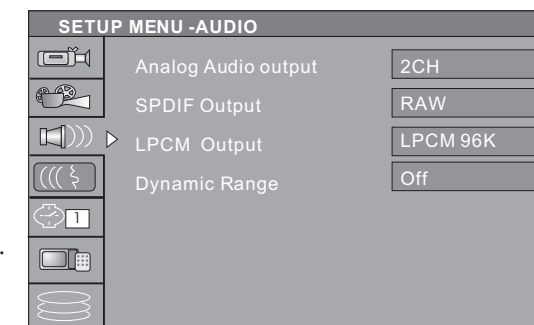

Analog Audio output

The unit can set the analog audio output at 2-CH or 5.1-CH. The output of 2-CH comes from L and R channels.

- Enter the play settings menu, use the ▲ or ▼ button to select “SPDIF Output” item, and press the “SELECT” button.
- Use the ▲ or ▼ button to select 2-CH or 5.1-CH, and press the “SELECT” button to confirm.

SPDIF Output

This unit has a digital audio output. You can enjoy music of better quality through an amplifier with a digital audio decoder.


- Enter the play settings menu, use the ▲ or ▼ button to select “SPDIF Output” item, and press the “SELECT” button to drop down a menu.
- Use the arrow buttons to select a proper value (RAW, LPCM), and press the “SELECT” button.
- Press the “RETURN” button to return to the upper level menu and set up other items.

SETUP MENU-VIDEO

TV Type

The product supports two different television systems that are incompatible with each other. **NTSC** is the television system that is adopted in the North America region, **PAL** is the television system that is adopted typically in the rest of the world especially in Europe and Asia.

1. In the General Settings menu, select the “TV Type” item and press the “SELECT” button to drop down a menu.
2. Select PAL or NTSC.
3. Press the “SELECT” button to confirm. This setting must be in accordance with the TV system, otherwise the video output might not work properly.

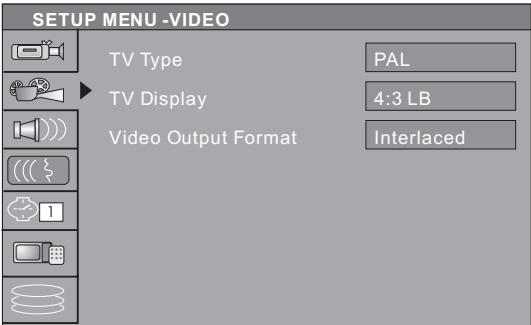

TV Display

1. In the Play Settings menu, press the “SELECT” button to select the “TV aspect ratio” item and drop down a menu, as shown in the down chart.



2. Use the ▼ or ▲ button to select a proper setting value, and press the “SELECT” button to confirm.. The values to be selected in this setting are explained as follows. **16:9WS** is suitable for a wide screen TV.

Pan Scan is suitable for a TV with ordinary screen size.

When a wide screen picture is played, the left and right margin will be cut and the picture will occupy the entire screen.

4:3 is use this for ordinary TV. When a wide screen picture is played, a black frame will appear at the top and bottom of the TV screen. The default value is Letter Box.


3. Press the “RETURN” button to return to the upper level menu and set up other items.

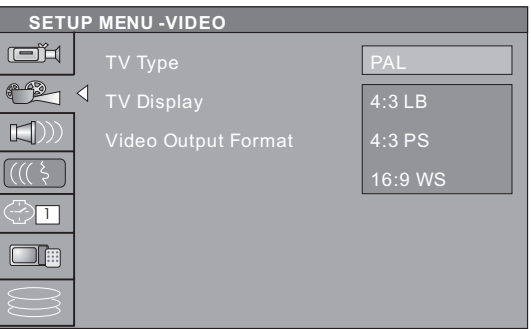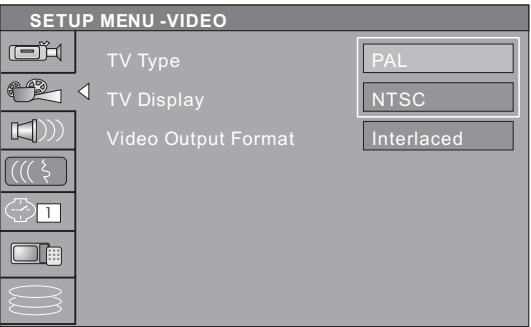


Note

- The playing effect depends on the recorded picture size. Some picture might not be played under the screen format you select.
- For those discs recorded as 4:3, no matter how the screen format is set, the screen format played is always 4:3.
- The selection of screen format shall be in accordance with the TV screen.

1. EJECT button
2. DV/USB button
3. HDD button
4. NUMBERS(0-9) button
5. SETUP button
6. LEFT DIRECTION /REPLAY button (UP/DOWN/LEFT/RIGHT)
7. SELECT button
8. TIMER button
9. TIME SHIFT button
10. REC/OTR button (RECORD/ONE-TOUCH RECORD)
11. PLAY button
12. STOP button
13. REVERSE button
14. PREVIOUS button
15. FWD button
16. NEXT button
17. AUDIO button
18. MENU button
19. SUBTITLE button
20. ZOOM button
21. POWER button
22. MONITOR button
23. DVD button
24. GOTO button
25. ADD/CLEAR button
26. NAVIGATION button
27. RETURN button
28. REC TO button
29. SLOW/SORT button
30. PAUSE/STEP button
31. CHANNEL+ button
32. VOLUME+ button
33. CHANNEL- button
34. VOLUME- button
35. PS/IS (PROGRESSIVE/INTERLACE SCAN)
36. REPEAT button
37. DISPLAY button
38. MUTE button
39. FILE PLAY button
40. PIP button

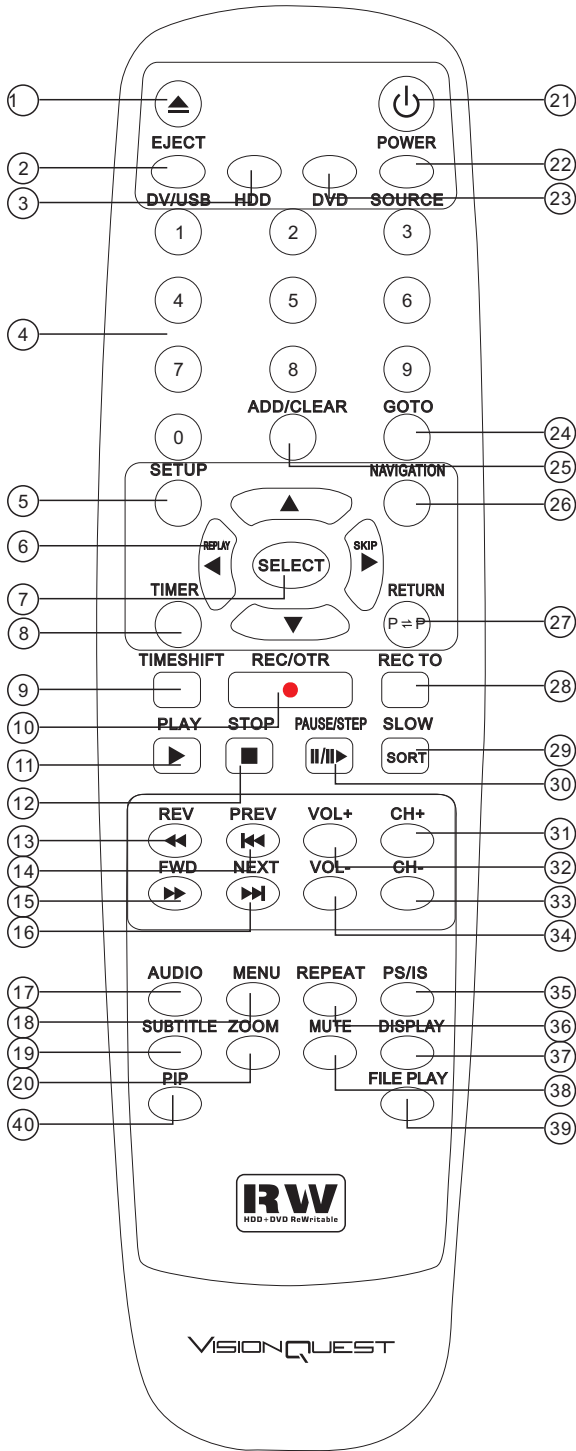


How to install and use the remote control

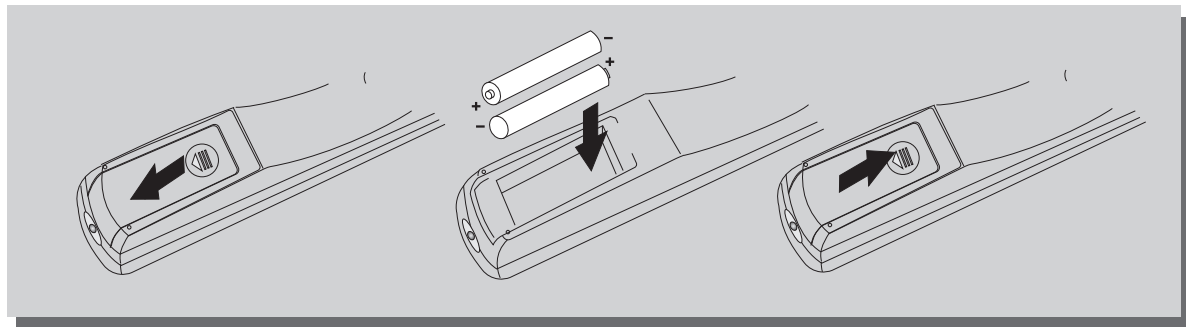

Notes:

- Do not drop the remote controller or leave it in places of high humidity.
- Do not leave the infrared ray receiver exposed to direct sunlight or bright light.
- Please change the batteries of low power in time. And do not use new and old batteries together. Try not to use rechargeable batteries.

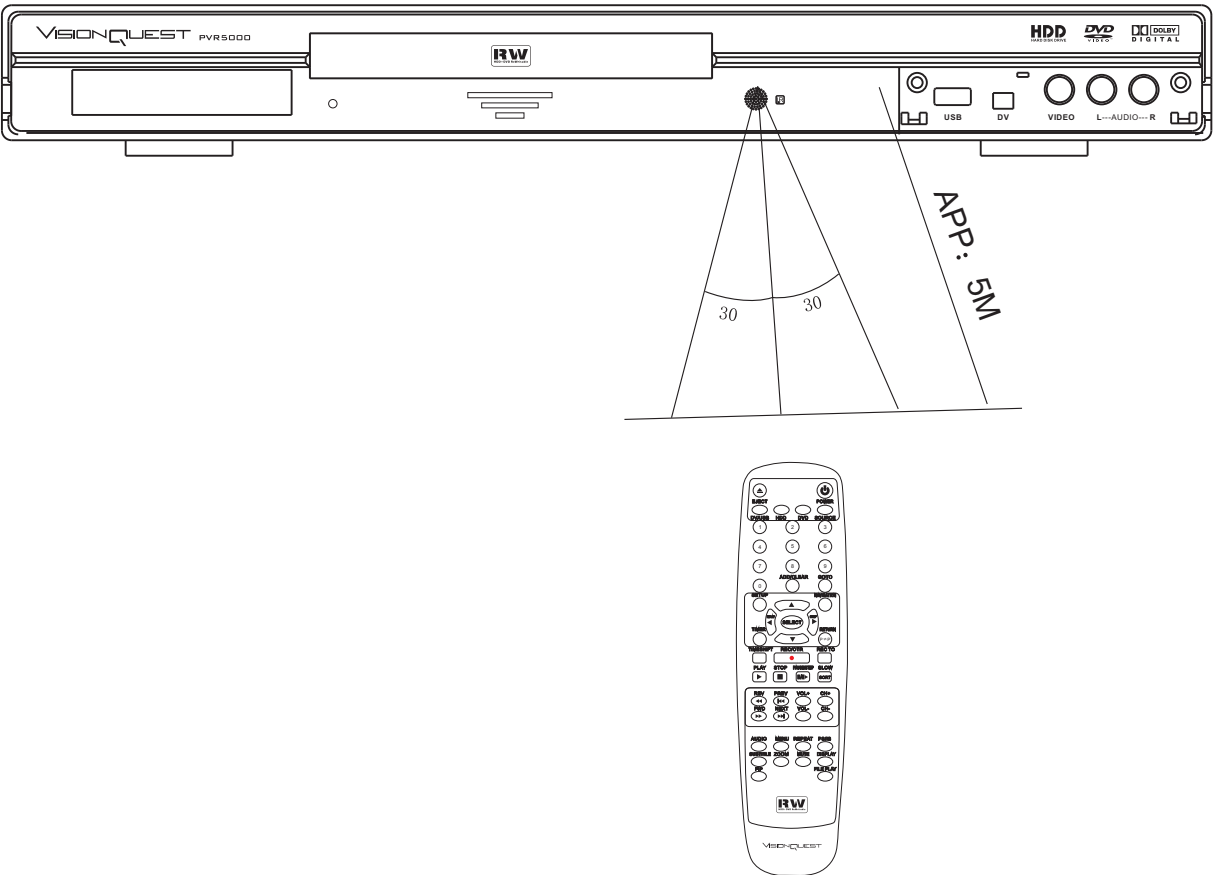

System Setup

Modify Channel

Use the▲ or▼ button to Select the “Modify Channel” item, in dialog chart select OK.

Modify channel information

Program Number	P013
Name	Ch 0 10
Frequency	144.27 Mhz
Fine Tuning	
Skip	NO

OK

Cancel

If you want to edit channels, select the “Modify Channel ” item, press “SELECT” button to confirm. In the pop up channel edit dialog box, use the▲ or▼ button and the “SELECT” button to select and confirm. Then follow these steps:


- Program Number: Current TV program number.
- Name: Ch031. You can change the name using the▲ or▼ button and “SELECT” button. Press the◀ or▶ button to move the cursor.
- Frequency: 144.27 MHz. When the search type is selected as Frequency, this item will be shown as the frequency. Press the◀ or▶ button to scan channels manually by frequency.
- Fine Tuning: Use the▲ or▼ and “SELECT” buttons to select this item and press the◀ or▶ button to tune the frequency slightly.
- Skip: Yes or No, use the▲ or▼ and “SELECT” buttons to select this item, you can select Yes or No to decide whether to skip this channel.
- After the channel to information is modified, select OK and press the “SELECT” button to confirm. Then return to the Channel Scan menu

System Setup

Record Quality


1. In the Recording Settings menu, use the ▲ or ▼ button to select the “Default Quality” item, and press the “SELECT” button to drop down a menu.
2. Use the ▲ or ▼ button to select a desired value and press the “Select” button.
3. Press the “RETURN” button to return to the upper level menu and set up other items.

* For the differences of the six quality levels, SP, SP+, LP, SLP, EP and HQ, see the glossary for reference.

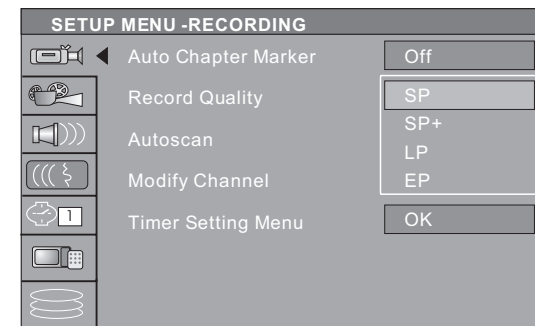

Autoscan (Auto program scan)

The unit has a channel tuner. You can receive TV signals directly from the unit. Before the tuning, you must conduct a channel scan to enable the unit to tune in various channels automatically and determine their frequencies. The tuned channels will be saved automatically. Even if the power is off, the saved channel information will not be lost. Press the “SETUP” button to enter the “System Setup” mode. Use ▲ or ▼ button, highlight Autoscan, select it, and the following chart will show.

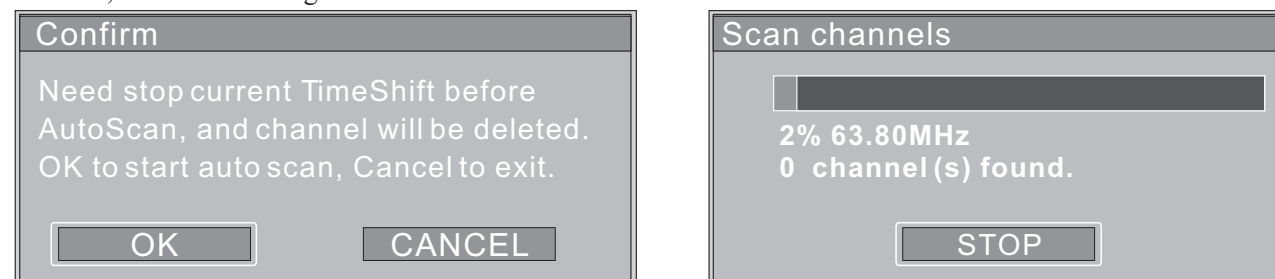


The meanings of the icons:

- 1) press the ▲ or ▼ button to Select the “Autoscan” item, as shown in the left top chart (if in TV channel state) .
- 2) Press OK button, shows the right top chart. The tuner will start searching through various channel frequencies and add available channels to the system memory. This procedure may take several minutes.
- 3) When the scan is complete, “TOTAL CHANNELS FOUND” will appear on the screen with the number of channels that have been stored to memory. Press the SETUP button on the remote control to exit.

System Connection

Connect to a TV

Before the system connection, be sure to switch off the power source of this unit and other devices.

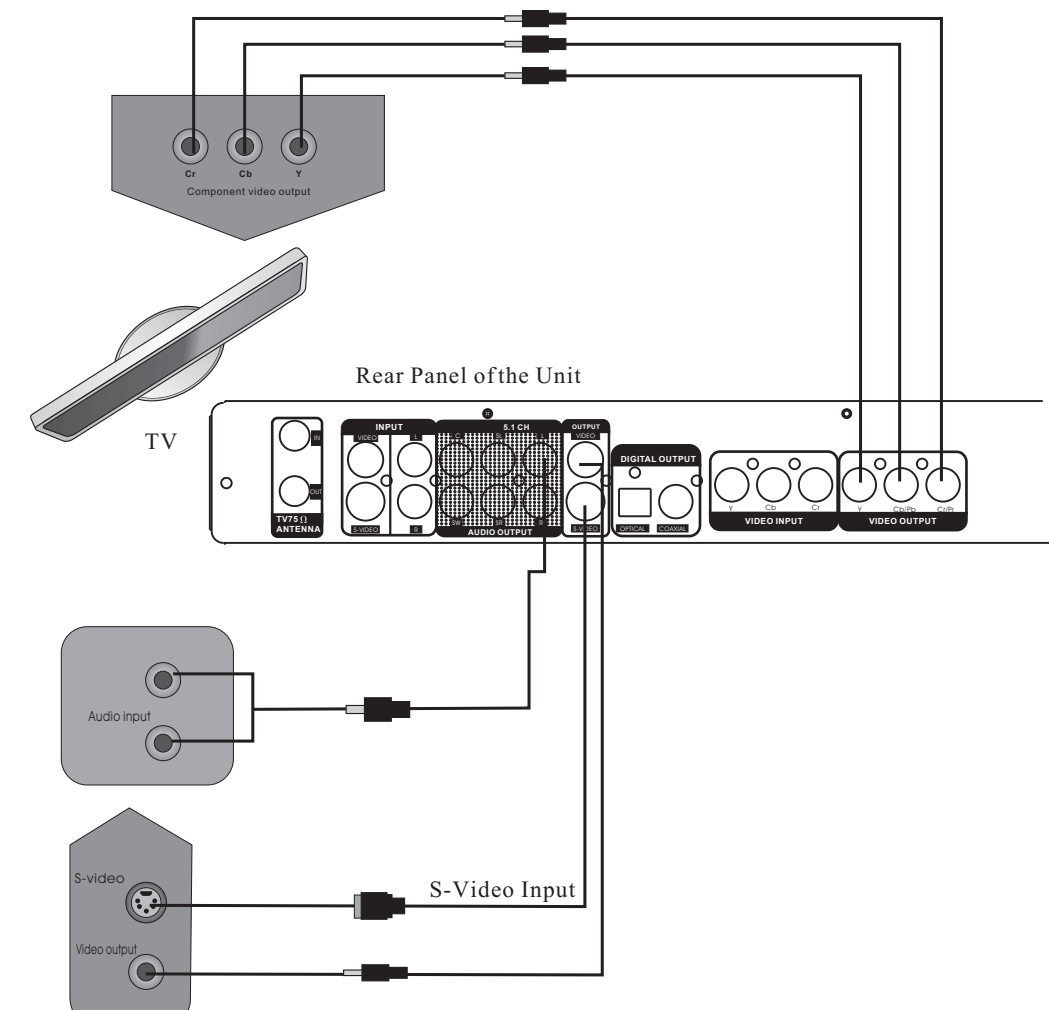


There are three kinds of video outputs in the unit, namely component video, S-Video and composite video. You can select one of the available video outputs of the TV and then make the connection.

In terms of picture quality, the component video is the best; S-Video comes next, while the composite video is less satisfying.


When connecting the audio output of the unit to the TV, connect the left and right audio outputs to the TV audio inputs of the same group as the connected video inputs.

System Connection

Connected to 5.1 channel Amplifier

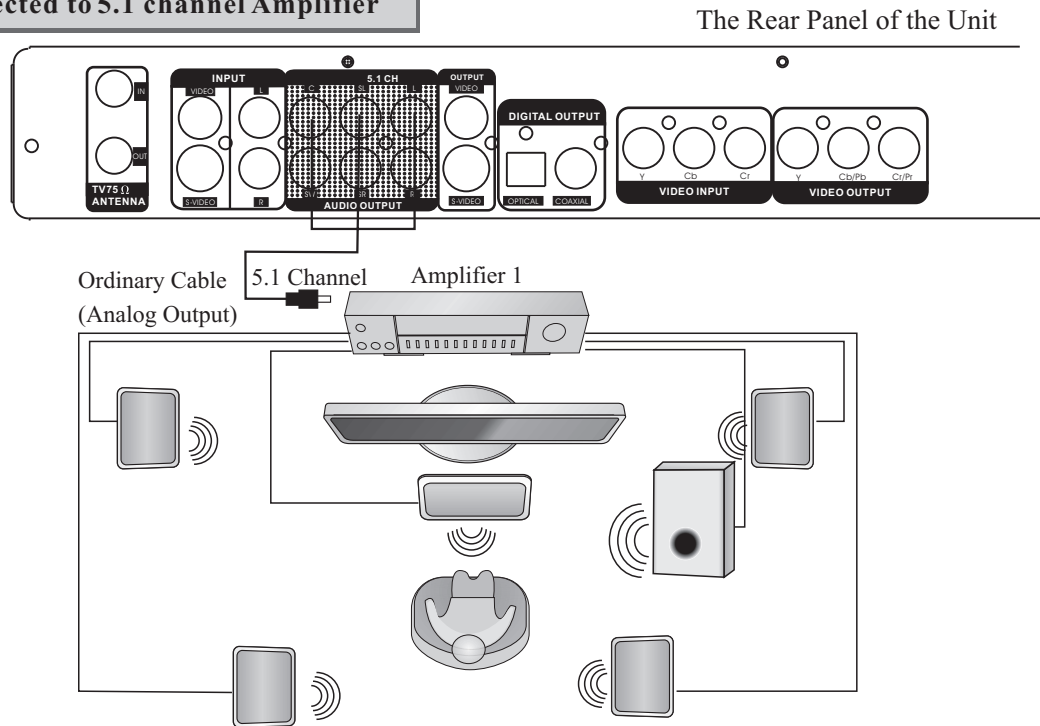

Connected to an amplifier with digital decoder

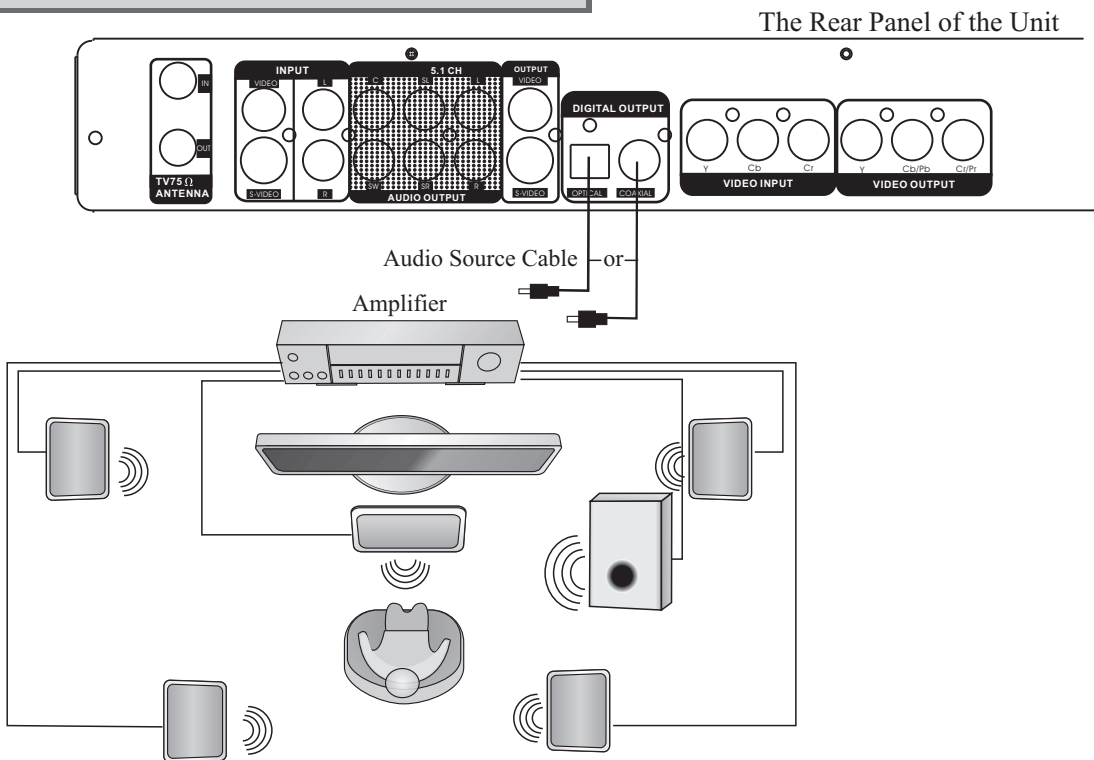

- In Audio Setup, set the “Digital Output Mode” to “LPCM Output” (For details, see “System Setup-Digital Audio Output” for reference).
- When using a digital signal output (coaxial or optical), the Analog Output cable is not needed for connection.

System Setup

To satisfy customers with different characteristics and suit related devices of different qualities, the unit provides various functions. You can setup the system of the unit and regulate its operations to cater for your taste and suit well with other related devices of yours. But if you think it's too complex, you may also use the default settings, which can meet your basic demand.


Operation Interface and General Steps

This section will introduce the menu interface of the System Setup and general operation steps.

1. Press the “SETUP” button to enter the System Setup mode. Now the system setup control bar menu will appear on the top of the OSD, as shown in the following chart.

The meanings of the icons are as follows.

- 1) Auto Chapter Marker
- 2) Record Quality
- 3) Autoscanner
- 4) Modify Channel
- 5) Timer Setting Menu

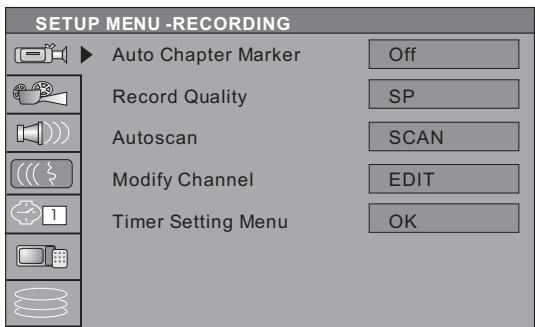

2. Use the or button to select items to be setup in the control bar and press the “SELECT” button to enter the setup menu of the item. In the setup menu of a certain item, press the arrow buttons and the “SELECT” button to operate some control units, and the corresponding settings will be done.
3. Press the “RETURN” button to return to the upper level menu. Press the “SETUP” button to exit the System setup mode.


Note

- The steps above are general and typical operations. Some settings might not need a certain step, or require more steps.
- Please set up the system in the Eject Disc mode or No Disc mode, otherwise some settings cannot be done.

Auto Chapter Marker

1. In the Recording Settings menu, use arrow buttons to select “Automatic Chapter Marker”, and press the “SELECT” button to drop down a menu.
2. Use the or button to select a proper value (5min, 10min, 20min, 30min or off), and press the “SELECT” button to confirm.
3. Press the “RETURN” button to return to the upper level menu and set up other items.

* Use different time option to insert chapter markers at x-minute intervals during recording.

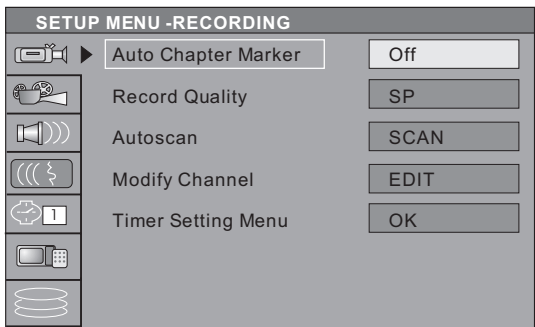

HDD Play Mode

The Saved program will be removed from the Time shifting buffer when Stop is pressed. The product will carry out the Save immediately if the system is powered down.

While in Time shifting mode, you can use the following keys for other operations:

Key	Result	Note
HDD	HDD title list	(recording continues)
DVD	Play disc	(recording continues unless you want to record to DVD)
DV/USB	USB	To play slide show from USB device or copy from USB to DVD. (recording continues)
Display	Display information list	(recording continues)
Eject Key	Open/close the tray	(recording continues)
Power Key	Power off	
Setup	Bring up Setup menu	(recording continues)
Timer	Bring up Timer menu	(recording continues)
Source	Changes the video source	
I/P	Change the video output mode to Interlaced/Progressive Scan	

NOTE: (option: SETUP, HDD, SPACE MANAGEMENT, AUTOMATIC). If the STOP is not pressed and the recording takes all the available space on the hard drive, the product overwrites un-protected titles in the FIFO (First In First Out) scheme. This rule will not affect titles that are selected to be copied to DVD. The selected titles will be kept until copying operation is over. Even after this procedure, there is no space on the HDD to record, the product will provide the same message as if it was in MANUAL mode (see next)

Note: (option: SETUP, HDD, SPACE MANAGEMENT, MANUAL). If the STOP is not pressed and the recording takes all the available space on the hard disk drive, the product will stop recording and request the user to erase some titles and create more room on the HDD.


Note: When the source is DV, the recording will not be in Time shifting buffer. Press Source (repeatedly) to select DV as your video source. The product's remote control will be able to send Play, Pause, Fast/Slow Forward/Reverse commands to the camera and start a Recording (Rec), Pause (a recording) and Stop (a recording).

You can use the SETUP, HDD, option to erase the entire content of the HDD. Please proceed with caution, as this process is irreversible. The product will ask you: All video programs on the hard disk drive will be lost, continue? Yes, No (default)


System Connection

System connection for recording external signals (front panel signal)

When connecting with external signals, be sure to switch off the power source of the unit and other devices. The connection with front panel inputs

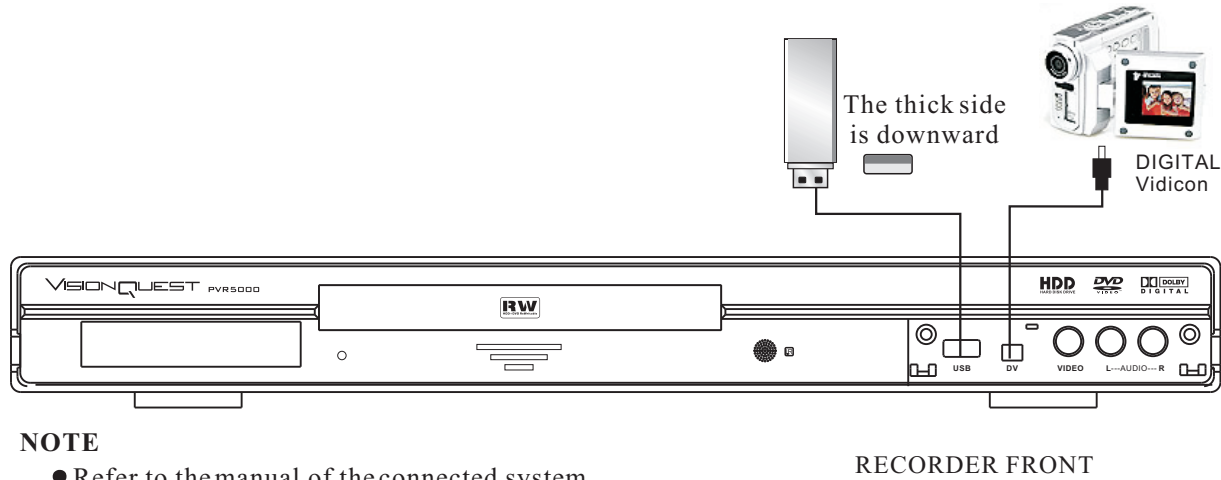


System connection for recording external signals (rear panel signal input)

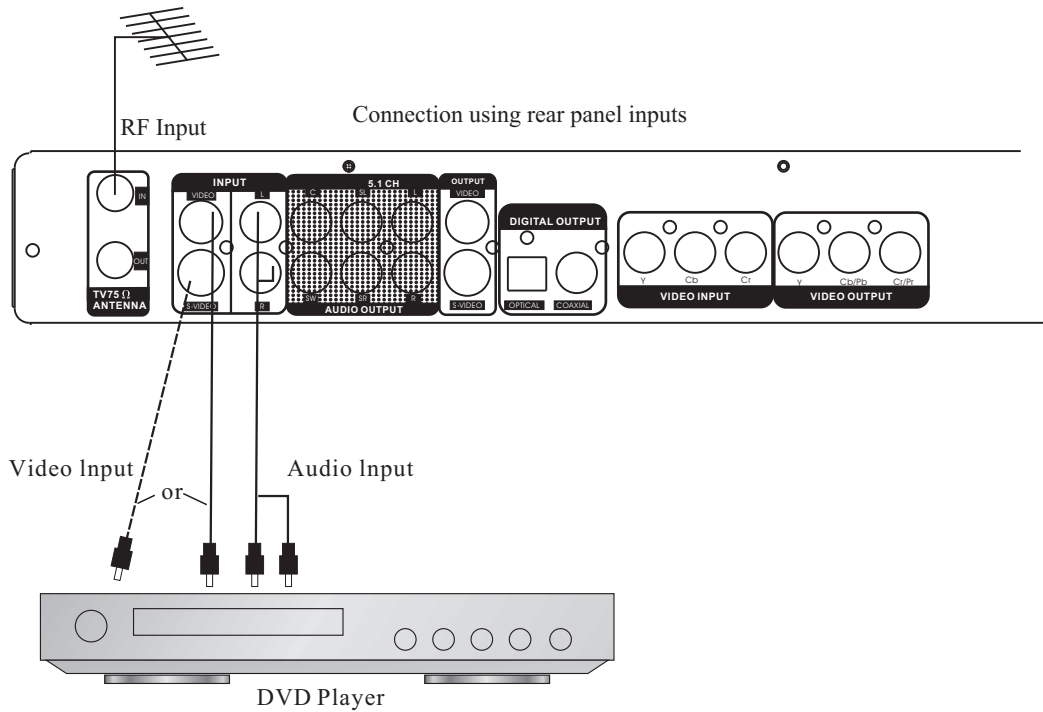

- From the video input terminals, select one as desired. In terms of picture quality, CVBS stands for good, S-VIDEO for better and Y/CB/CR for best.

NAVIGATION Mode

The NAVIGATION Mode can realize all functions of the unit.

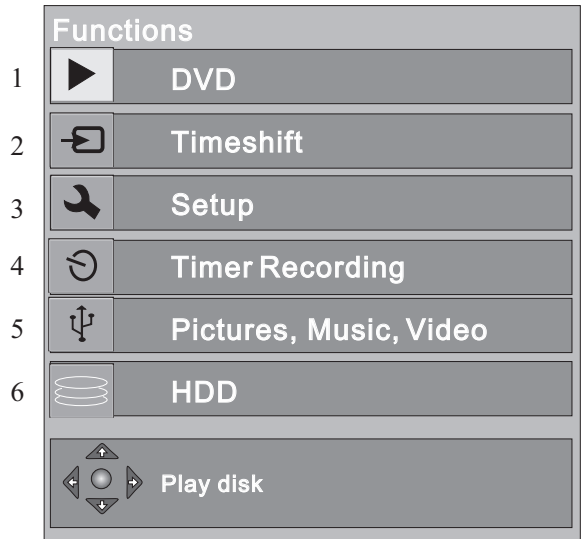

Press the “NAVIGATION” button of the remote control to display the screen on the left.

- 1.Switch to DVD Playback Mode;
- 2.Switch to TIMESHIFT Mode;
- 3.Switch to SYSTEM SETUP Mode;
- 4.Switch to TIMER RECORD Mode;
- 5.Switch to Pictures, Music, Video Playback Mode;
- 6.Switch to HDD Playback Mode;

Recording Mode

Introduction

There are various external signal inputs in the unit, including S-Video, composite video, TV tuning , DV input and stereo audio input. You can select any group of audio and video signals from these inputs for recording.

The recording discs of the unit include DVD+R/RW, DVD-R/RW and HDD. There are six available recording modes of different qualities, including SLP (6 hours), LP (4 hours), EP(3 hours), SP+ (2.5hours),SP (2 hours) and HQ (1 hour).

The unit has a function of timer recording. You can set up a recording schedule in advance. The unit will record the programs that you select automatically.

Entering the recording mode and menu description

- To enter the recording mode, take the following steps:
1. In the Non-rewritable Disc mode, press the “SOURCE” button to enter the Monitoring Mode.
 - The Monitoring Mode can be regarded as a sub-mode of the Recording Mode.
 - 2.The system will automatically enter the Recording Mode when the setup time is reached.
 - For details about timer recording, see “Timer Recording” for reference.
 - 3.In the Recording Mode, press the “DISPLAY” button to show or hide the recording control bar menu.


HDD Play Mode

If you are using the default value of setup->Timeshift->Timeshift default source-> Tuner(ON). When the product is turn on, the system will enter into Tuner state. Timeshift turn on mode automatically, when selectFCVBS(OFF) item. Enter intoFCVBS state, Timeshift turn off mode.

If you are using the default value of Setup-> HDD->Timeshift Buffer->Refresh, and change Channels, the Time shifting buffer data will be lost.No message will be provided prior to doing so.However, ifyou set Setup-> HDD->Timeshift Buffer->PRESERVE, and change Channels, the Time shifting buffer data will be maintained.

Note: If youchange the inputsource of video and the video standard is different (NTSC vs. PAL),the Time shifting buffer will be erased.


Note: During Time shifting,a Timer recording (programmed recording) may come up. As you cannot watch oneprogram in Time shiftingand record anotherchannel, the productwill ask you to confirmif you want to keep the current channel orproceed with Timer recording. Ifthere is noresponse, the productassumes Timer recording should be started. The message will appear 2 minutes before the Timer recording is due.

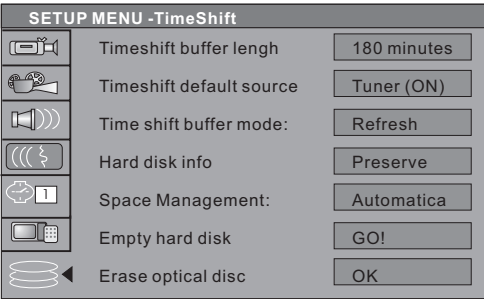

Time shifting is stored in a buffer that contains 60 minutes of recording. After 60 minutes, the buffer will be progressively overwritten. Ifyou need to keep the video contained in thisbuffer for future use, youcan Save all orpart of thebuffer.

Save
In order to Save from within Time shifting buffer, two optionsare available:

Save Option 1. While viewing a program, press Rec. This will start saving the segment you are watching. You can navigate forward. During the saving operation, by pressing Rec, you will increase the length of the program you are saving by 30 minutes up to a maximum of 3 hours. Press STOP to indicate the end of the saving operation. The saved part of the time shifting buffer will be tagged in red color.

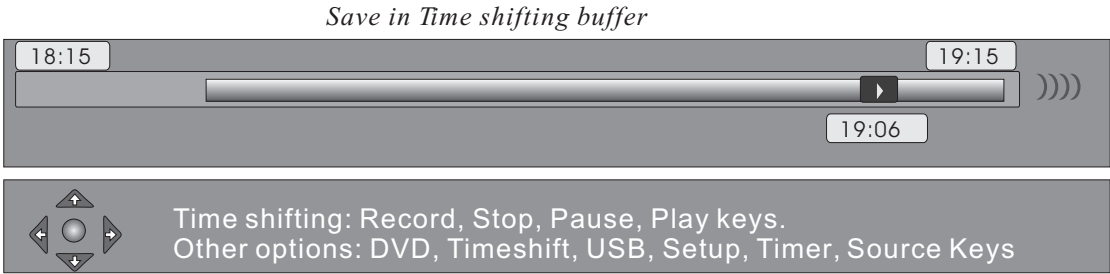

Save Option 2. While viewing a program, press **Rec** and hold down for 3 seconds. This will save the entire Time shiftingbuffer. If **Stop** is pressed, the saving will terminate at that point in the buffer. During the saving operation, by pressing **Rec**, you will increase the length of the programyou are savingby 30 minutesup to a maximum of 3 hours. Press **Stop** and hold for 3 seconds if you want to cancel the entire saving operation.


Note: You cannot change the channel or the source if saving is on-going (the end of the recording segment is either not entered, or in case of long recording, it has not been reached). Saving has to be manually stopped first (by pressing **STOP**). The product will request you to Stop saving first. The segment will be Saved on HDD and then channel or source change can be performed.

Note: Only one segment in the Time shifting buffer can be identified for Saving. It is not possible to identify multiple segments. Once the segment has been Saved and registered on Title list, this segment (and its preceding video part) will be removed from the Time shifting buffer.

HDD Play Mode

Time shifting introduction

When the product is turned on, if the setup menu setup->Timeshift->Timeshift default source->Tuner(ON) or you press Timeshift button from other menus, the last viewed TV channel will be tuned in and Time shifting starts automatically. Time shifting allows 'PAUSE' the live TV broadcast for up to 60 minutes. At any time, the viewing can resume. Press PAUSE to pause the broadcast, press PLAY to resume TV viewing. If the system is paused for 60 minutes, it will automatically resume TV viewing.

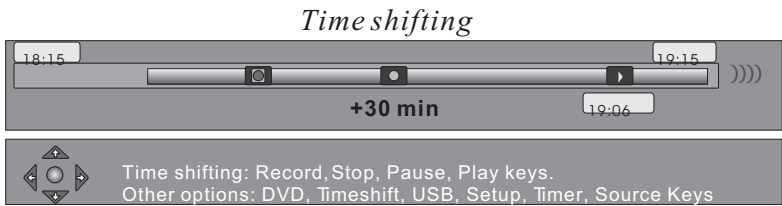

Remote contro	On-Screen Display
Display (pressed once)	Time shifting buffer information. Current playback time, time of recording, time of recording minus 1 hour, trick mode status, Saving status, Channel/Source information, Dubbing indicator (if Dubbing is on-going) - see <i>Time shifting</i> figure
Display (pressed twice)	Hot keys and navigation information
Display (pressed three times)	Removes all On-screen Display

You can navigate in Time shifting mode and control the audio output by using the following remote control keys:

Key	Result	Note
CH+/-	Change the channel	Note: By default, changing the channel will erase all Time shifting required for the current channel. This option can be reset in the Setup->HDD->Time shift Buffer->Preserve
0-9	Change the channel	
FF	Fast Forward. Press to cycle through 4, 8, 32x speeds.	
Slow	Slow forward. Press to cycle through 1/2, 1/4 or 1/8x speeds	
Replay	Jump back 10 seconds	Hold the left key for 2 seconds, it will jump back 60 seconds.
Skip	Jump forward 30 seconds	Hold the right key for 2 seconds, it will jump forward 60 seconds.
Mute	Mute audio on/off	
VOL+/-	Decrease/increase volume	

Recording Mode

Manual Recording

Recording Source

You can select which video input the machine should record from. The following options are available:

•Rear CVBS (Composite) •Rear S-Video •Tuner •Front CVBS (Composite) •DV Input

Press the **SOURCE** button (repeatedly) to change the video source and select one of the above.

Note: If you are recording from a rear source, make sure your audio connections are connected to the rear audio inputs. If you are recording from a front source, make sure your audio connections are connected to the front audio inputs.

Recording to DVD or HDD

Select Recorder to HDD or optical disc:

Press Timeshift button once to switch to manual recording mode, and press **REC TO** button to switch difference HDD or DVD Record source.

If you have a recordable media in the tray, you can press Rec and start recording (OTR) to DVD. Press Stop to finish recording.

Note: The product will continue to record until the disc is full. To set the product to record for 30 minutes only, press the **REC/OTR** button after recording has started. A message will be displayed on the screen indicating that the product will record for 30 minutes. Each time the **REC/OTR** button is pressed, an additional 30 minutes will be added to the record time. To pause the recording, press the **PAUSE** button on the remote control. Press the **PAUSE** button or the **REC/OTR** button to resume recording. Recording will continue until the **STOP** button on the remote control or the product front panel is pressed.

Press the remote control Timeshift button once, turn on Timeshift mode, press the button twice, switch to manual recording mode display the chart below.

Note: In the display chart, you may press REC TO button to switch difference HDD or DVD Record source.

Sys state: STOP
Record To Optical Disc As SP(25 min/GB)
Elapsed Time: 00:02:38 Remain Space: 02:05:02

Recording Quality

You can select from up to six record quality settings to define the picture quality of the recordings and the amount of space you want to use on the DVD/HDD. Higher quality recordings will consume more space and low quality recordings will consume less space on the DVD/HDD.

NOTE: Use the ADD/CLEAR button to switch between different record quality options.

Record Quality	Recording Time (4.7GB,DVD)	Recording Time (250GB,HDD)	Video Quality
HQ (High Quality)	1 Hour	53 Hours	Best
SP (Standard Play)	2 Hours	106 Hours	Very Good
SP+(Standard Play)	2.5 Hours	132 Hours	Good
EP(Extended Play)	3 Hours	159 Hours	Normal
LP (Long Play)	4Hours	212Hours	Moderate
SLP (Super Long Play)	6 Hours	319 Hours	Low

One Touch Recording (OTR)

This function enables you to set up the timer during the recording process. Once the scheduled time is reached, the system will stop recording automatically.

- Enter the "Recording Mode" and start recording.
- For desired timer recording, press the "REC/OTR" button once or several times.
 - The recording time will increase by 30 minutes with every pressing of the "REC/OTR" button. If the scheduled time exceeds the recordable time of the disc, normal recording mode will restore.
 - If the timer recording is paused or stopped, the system will cancel the timer recording process.

Recording Mode

DV Controlled Recording

- This unit can perform real-time monitoring and recording for a DV through the IEEE 1394 serial port (DV).
 - Connect the DV to the unit (for details, see “System Connection: System Connection for Recording External Signals”) by the front panel inputs.
 - Switch on the power of the unit.
 - Press the “DV/USB” button.
 - Switch on the “Power” button of the DV, set it to the “CAMERA” mode, and start monitoring.
 - Press the “REC/OTR” button to start recording. (Other operations is the same as in the Recording Mode)
- This unit can also record the VCR content of the DV.
 - The connection method is the same as stated in the first 3 steps of 1.
 - Switch on the “Power” button of the DV to enter the VCR status, and the VCR status is “Stop” .
 - Use the remote controller of the unit to complete the operations of the DV, including STOP, PLAY, PAUSE, FB, FF, etc.
 - Press the “REC/OTR” button and then press the “PLAY” button to start recording.
 - During the recording process, press the “PAUSE” button to suspend recording of the unit, and press the button again to suspend the DV. To restore play of the DV, press the “PLAY” button; if you press the “REC/OTR” button, the play of the DV and the recording of the unit will resume at the same time; press the “FWD” , “REV” button to complete forward or rewind operation for the DV, while it reports Pause status to the unit; If you press the “STOP” button, the recording of the unit will stop first, and press again to stop the play of the DV.

Note: Do not move the unit or switch off the power during the recording process.

The finalized DVD+R disc could not be recorded.

Be sure to switch off the power of the unit and the DV before connecting the DV cables.


Copy from HDD to Optical disc

Press the remote controller HDD button, enter into the HDD display state . Show as follow, in this state, press ADD/CLEAR key to select the five titles you desire to copy to DVD, then press REC key to copy selected file to DVD.

Note1: In DVD tray ,there should be a blank Rewritable DVD disc ,or the disc was previously used only for archiving from HDD.

Note2: When copying from HDD to DVD+RW disc, there will be a flashing icon on the upper left corner of the screen to indicate the recording process.


Note3: You can press the STOP button to finish copying from HDD to optical disc **ONLY** in **HDD** mode.

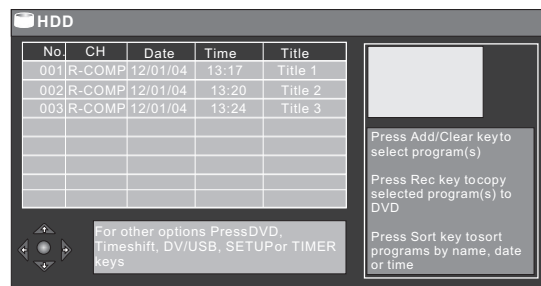

Play Mode

Play a USB DISC

- Insert the USB disc, the unit will detect it automatically and display a “Ψ” symbol in the lower right corner of the TV screen for a second.
- In the DV Mode, press the “DV/USB” button, or in the NAVIGATION Mode, to switch to USB Play Mode.
- The unit will automatically identify the files in the USB DISC. The playable formats of the unit include:
 - *.WMA, *.JPG.
- Press the ▲, ▼ and “SELECT” buttons to select an item to play.

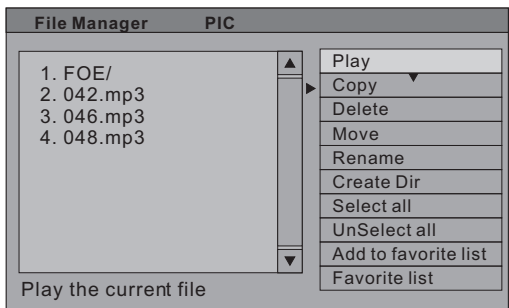

HDD Play Mode

HDD Playback

Press the remote controller HDD button or in the NAVIGATION mode, switch to HDD/Playback state. During HDD playback, the following remote control keys are valid:

Key	Result	Note
Play	Play (resume)	Follows Pause
Pause	Pause/Step	
Stop	Stop	Will return to the Title list. Same as Return
Return	Return	Will return to the Title list. Same as Stop
FF	Fast Forward x 4, 8, 32	
Slow	Slow forward x1/2, 1/4, 1/8	
Next	Skip Next chapter	
Previous	Skip Previous chapter	
Display	Display OSD info and online help	When pressed repeatedly, toggles between: progress bar -> add helper text (and dynamic compass) -> add title info (on the top) -> no overlay
Repeat	Repeat Title	
Right	Skip	Jump forward by 30 seconds
Left	Replay	Jump backward by 10 seconds
HDD	HDD title list	
DVD	Optical disk manipulation	
Timeshift	Time shifting	Also can press Monitor to record from sources other than TV
Timer	Timer recording setup	
USB	USB mode	Slide show view, or USB to DVD archiving
ZOOM	ZOOM	See details below
Goto. Num(0-9)	Time search	Press Goto button and Num(0-9) button to select the Goto Time.

ZOOM

The zoom feature allows you to enlarge an image that is currently displayed on the screen and pan through to specific areas on the zoomed image. There are two zoom options available (1.5x, 2.0x) which will be indicated on the screen.

During pause, press the **ZOOM** button to zoom the image on the screen to 1.5x.

Use the **CURSOR** buttons to pan (select the part of the image you want to zoom in on)

Press the **ZOOM** button again to zoom the image on the screen to 2.0x.

Press the **ZOOM** button again to return the image on the screen to normal.

Play Mode

Subtitle Selection

Some DVD discs may have more than one kind of subtitle. You can select one of them as the output.

- In the play control bar menu, select the “Subtitle” item.
 - There are some digits under the icon. The number on the right is the total number of subtitle languages provided by the disc; the one on the left is the current selection. The default value can be set in the “System Setup”.
 - If there is a word “Off” under the icon, it indicates that the subtitle is off. This value can be set in the “System Setup”.
- Press the “SELECT” button to make the “Subtitle” item available for selection.
- Press the ▲ or ▼ button of the remote controller to select the subtitle language, and press the “SELECT” button to confirm.
- this function enables you to switch between subtitles by pressing the “SUBTITLE” button directly.

DVD	
MODE	Normal
Trick mode:	▶
TITLE	01/01
CHAPTER	02/14
AUDIO	01/03-OTH
SUBTITLE	01/01-OTH
ANGLE	01/01
T- TIME	00:02:48-00:51:25

DVD	
MODE	Normal
Trick mode:	▶
TITLE	01/01
CHAPTER	02/14
AUDIO	01/03-OTH
SUBTITLE	01/01-OTH
ANGLE	01/01
T- TIME	00:02:48-00:51:25

Multi-angle Switch

For some DVD discs, the pictures are shot from different angles at the same time. While playing, you can view from different angles.

- In the play control bar menu, select the “Angle” item.
- Press the “SELECT” button to make the “Angle” item available for selection. Enter a number and press the “SELECT” button to confirm. Then the angle will be changed.

There are some digits under the icon. The number on the right is different angles of pictures provided by the disc; the one on the left is the current selection.

PBC ON/OFF (Available only for VCD 2.0 or above versions)

- In the play control bar menu, select the “PBC ON/OFF” item.
- Select the “On” or “Off” value and press the “SELECT” button to activate or inactivate PBC function. Press the “MENU” button to activate or inactivate PBC function directly.

Note

- The so-called PBC function indicates the menu play mode of VCD 2.0. When the PBC is on, the system will provide a list of all tracks. You can select to play any of these tracks using the number buttons of the remote control. When the PBC is off, the system will play the disc in the normal order.
- Not all VCD discs support PBC play.

VCD	
MODE:	Normal
Trick mode:	▶
TRACK:	01/01
AUDIO:	Stereo
PBC:	ON
TIME:	00:02:48-00:51:25

Picture Zoom Function

In the playing status, the unit has the function to zoom in pictures. (Available for DVD, VCD and JPEG)

- In the playing status, press the “ZOOM” button, to enlarge the picture by 150% or 200%.
- After the picture is enlarged, use the arrow buttons ▲, ▼, ◀ or ▶ to move the picture so that you can view different parts of the enlarged picture.

Recording Mode

Copy from Optical Disc to HDD

1. The unit plays Divx, MP3, WMA, JPEG formatted disc. Chart 1. pops up automatically when disc is inserted. Then use the arrow buttons to select the file you want. Using the Add/Clear button you can choose what to do, i.e. Add or Clear. After selecting the required file press the right arrow which will make chart 2 pop up. Select copy, the HDD will show you a list of options. Then press right arrow which will make chart 3 pop up. Select start copying. Disc will now transfer files to the HDD. If you want to play the file that copied from optical, press File Play button, you can find file from HDD list.

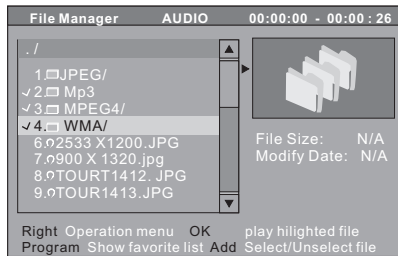


Chart 1



Chart 2

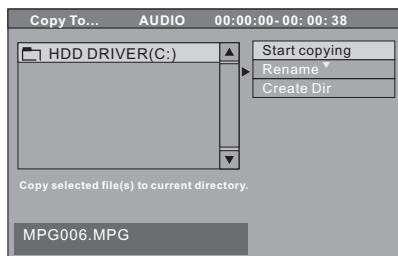


Chart 3

2. If the unit playing the video disc has more than one file, arrow down and highlight the required file and right arrow. Chart 4 pops up with a list of options as shown. Select copy. Disc will now transfer files to the HDD.

NOTE: Only disc, DVD+RW, unfinalized DVD+R which have recorded by the unit can be copied on to the HDD.

3. When is playback DVD or VCD disc content, press the remote control REC/OTR button. The disc content star record direct from optical disc to HDD.


NOTE: Before record, you must press the remote control TIMESHIFT button to shut off timeshift state.



Chart 4

PIP (Picture in Picture)


PIP: View live video during time shifting, this is a feature that can allow to claim PIP without the extra cost associated with multiple tuners. It allows watching the live video broadcast while in the time shift buffer. One benefit is as follows: Video can be paused, and channel on the live video changed to a more interesting content, then unpause time shifting to watch the remaining of the previous program. Live broadcast shall be available in PIP (ON/OFF) View live video in PIP during optical playback. While playing DVD, see what is being recorded onto HDD. When playback the HDD or DVD content, press the remote controller PIP button, pop up a live video menu on the top right of the screen. Press PIP button again, the Live Video menu disappear.

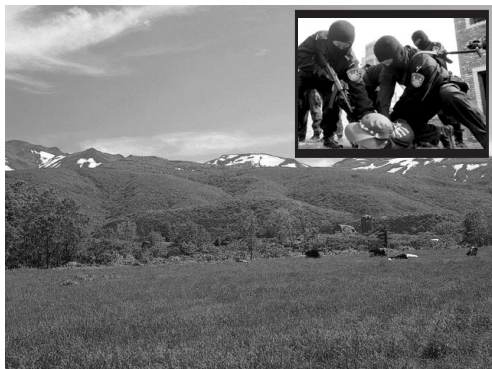

File manager

Press the remote controller FILE PLAY button twice. Enter the file manager list, select one of the file, press the remote controller ▶ arrow button, pop up a menu, display the chart on the right. In the file list. Ten operations are possible, the option are: play, copy, delete, move, rename, create dir, select all, unselect all, add to favorite list, favorite list.

In file list area to select drive (USB, HDD or DVD) directory and file place in program list. This operation can be repeated many times by the user. You may select the file to copy in difference file direction list.

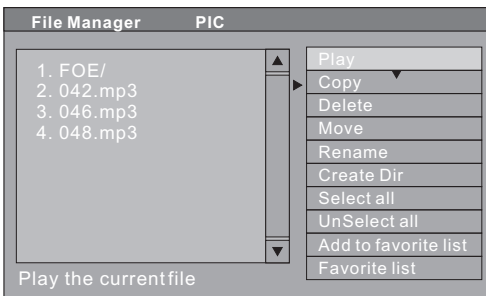

Play Mode

Selection Play

Track Selection

Available for VCD, SVCD, CD, etc.


1. In the play control bar menu, select the Track item.
2. Press the “SELECT” button to enter the input mode.
3. Press the number buttons to enter the track number to be selected.
4. Press the “SELECT” button to start playing.
 - While the PBC is on, the track cannot be selected for SVCD and VCD discs.
 - If the “SELECT” button is not pressed for a few seconds, the system will automatically play the selected track.

VCD	
MODE:	Normal
Trick mode:	▶
TRACK:	01/01
AUDIO:	Stereo
PBC:	ON
TIME:	00:02:48-00:51:25

Track Selection Play for Audio or MPEG4 Discs

For audio or video discs like MPEG4, you can select a track from the Disc Content List and play it.

1. Press the ◀ or ▶ button to move the cursor to the Disc Content List box.
2. Press the ▲ or ▼ button to select a track, press the “SELECT” button, and the system will start playing the selected track.

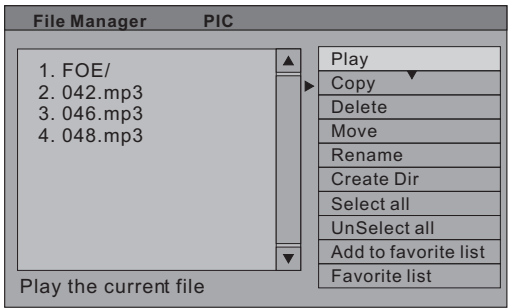

Time Selection

1. In the play control bar menu, select the “Track Time” item.
- The time shown under the icon is the time played of the current chapter (for DVD discs) or the current track (non-DVD discs).
- The Time Selection function is not available for some discs. In this case, this icon cannot be selected. Press the “SELECT” button to enter the Edit Mode. Press the number buttons to enter the time and press the “SELECT” button to confirm. If the input time is valid (less than the total length of the current chapter or track), the system will start playing from the input time.

- You can only select a time point in the current chapter or disc for playing.
- If the input time exceeds the total length of the current chapter or disc, the system will remain in its previous play mode.

VCD	
MODE:	Normal
Trick mode:	▶
TRACK:	01/01
AUDIO:	Stereo
PBC:	ON
TIME:	00:02:48-00:51:25

Timer Recording

6. Set up the Recording date.

A. If you select “Weekly”, press the “SELECT” button to confirm. Move the cursor to the right control unit in the row, and press the “SELECT” button to pop up a week list, as shown in the chart. Select a proper value according to your need.

B. If you select “Once” press the “SELECT” button. The date input editor box will appear on the right. Highlight the box and press the “SELECT” button, then use the number buttons to enter the date in the form of “MM/DD/YY”, press the “SELECT” button to confirm. If the input is invalid, the system will prompt an input error message. At the same time, the “Date Input Editor Box” will be left empty. Please enter the date again.



7. Set up the starting time of recording: In the “Item Editor” dialog box, use the arrow buttons and the “SELECT” button to highlight the “Start” option and the input box. Enter a value between 0:00-23:59 with the number buttons and press the “SELECT” button to confirm. This function is used to set up the starting time of the recording. If the input value is beyond the range of 0:00-23:59, the system will give an invalid message.

8. Set up the end time of recording.

Terminated operation is similar to Step 8. This setting means: when the end time is reached, the recording process will be stopped and the unit turns to standby status.

9. Record to source: you may select HDD and optical disc source.

10. Set up the record title, use ▲ or ▼ to change the letter, press select button to enter it.

11. Switch the VPS function on/off. When this function is on, the system will track down and record the TV signals automatically according to the starting time. It can also pause or stop recording automatically according to the information given by the TV signals. When the starting time is reached but the unit doesn't get the starting time information, the recording will start at the scheduled starting time. When the scheduled end time is reached and the unit doesn't get the information, the recording will end at the scheduled end time. But the unit will wait for 29 hours. If the unit receives starting time information during this time, continue recording according to this information. After that, if the starting time information is still not available, this setting will be cancelled. (Note: VPS feature depends on local TV broadcast signal.)

12. After completing setup of various parameters of timer recording, highlight the OK location, press the “SELECT” button, and finish setting up a timer recording schedule.

13. Press the “TIMER” button to exit the timer recording setup menu.

14. After setting up the timer recording schedule, configure the system according to the schedule and make sure the system is in standby or working status.

15. If the system is conducting another operation five minutes before the schedule time, it will pop up an information box, prompting you whether to start recording or not. If the recording condition is met, highlight the OK button and press the “SELECT” button to confirm. If the information box is left unattended, the system will take it as a consent to record. After a while, it will start the recording according to the set schedule.

16. If the system is in standby status, it will enter the recording mode automatically 3 minutes in advance and start recording following the set schedule.

17. After completing the recording, the system will restore the status before the recording automatically.

Note

- The system must be properly configured with the set values before completing expected recording jobs.
- Select any timer recording item and press the “ADD/CLEAR” button to delete it.
- Do not use the finalized DVD+R/-RW disc

Chapter Editing

Introduction

For finalized discs, every title consists of only one chapter. There is no such function as selected chapter play or random programmed play of disc segments for such discs. The index icon of each title is determined by the system. As every title consists of only one chapter, it is inconvenient to browse the disc when you desire individualized appreciation. The chapter editing function is to solve such problem.

Enter the Chapter Editing Mode

When the disc in the drive is DVD+R/RW and the system is in the DVD Root menu, Press ▲ or ▼ to highlight the title that you want to edit, then press ► to show the edit menu and select edit to enter the Chapter Editing mode and the Chapter Editing control bar menu will appear.


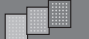






Note


 






The Chapter Editing function is only available for DVD+RW discs.
If the DVD+RW disc is write-protected or the current mode does not allow the entrance of Chapter Editing mode, the remedy for the former is to cancel the write protection with disc operation, and in the latter case, just exit the mode.

Menu Description

The chapter editing control bar menu is as shown in the following chart and the meanings for each item are as follows:

1. Title:. The left number under the icon is the current title to be edited; the right is the total number of the titles in the disc.
2. Chapter. The left number is the current chapter; the right is the total number of chapters in the title.
3. Play: The function is the same as the Play Mode.
4. Chapter Mark:.. Split or Combine Chapter function.
5. Hide Chapter:.. Hide or Show Chapter function.
6. Index Picture: Change the index picture.
7. Split Title: Split the title in two.
8. Time: Time Selection Play.

	Editing Mode
1	 Title: 04/04
2	 Chapter: 01/01
3	 Play
4	 Chapter marker
5	 Hide Chapter
6	 Index picture
7	 Split title
8	 Time: 0: 00: 02

	Editing Mode
	 Title: --
	 Chapter: 01/01
	 Play
	 Chapter marker
	 Hide Chapter
	 Index picture
	 Split title
	 Time: 0: 00: 02

Play Mode

Pause/Step Play

1. While playing a supported disc, press the “PAUSE/STEP” button, and the system will suspend playing.
 2. Press the “PAUSE/STEP” button again, and the picture will move one frame forward.
 3. Press the “PLAY” button, and the system will restore normal playing.
- While playing CD-DA , press the “PAUSE/STEP” button again, and the system will restore normal playing.

Volume Control

1. Press the “MUTE” button, and the system sound is mute.
2. Press the “VOL +” button, and the sound volume will increase.
3. Press the “VOL -” button, and the sound volume will decrease.

Note:

Some of the operations stated in this section can be done with function buttons of the remote controller or the menu, their effect is the same.

Selection Play Mode

Title Selection

- Only available for DVD discs
1. Enter the play control bar menu.
 2. Press the “▲ or ▼ button to select the “Title” item, and press the “SELECT” button to enter the input mode.
 3. Press the number buttons to enter the Title Number to be selected.
 4. Press the “SELECT” button to play the selected title.

Chapter Selection

1. Only available for DVD discs.
In the play control bar menu, select the “Chapter” item.
2. Press the “SELECT” button to enter the input mode.
3. Press the number buttons to enter the Chapter number to be selected.
4. Press the “SELECT” button to play the selected chapter.

DVD	
MODE	Normal
Trick mode:	►
TITLE	01/01
CHAPTER	02/14
AUDIO	01/03-OTH
SUBTITLE	01/01-OTH
ANGLE	01/01
T-TIME	0:02:48-00:51:25

DVD	
MODE	Normal
Trick mode:	►
TITLE	01/01
CHAPTER	02/14
AUDIO	01/03-OTH
SUBTITLE	01/01-OTH
ANGLE	01/01
T-TIME	0:02:48-00:51:25

Play Mode

Play Process Control

In this section, we will introduce how to control the play process.

Menu Operation

Most of the play process control operations can be done through the menu. The operations are as follows.



1. Enter the play control bar menu, use the arrow buttons to select the status-play item and press the “SELECT” button.

DVD	
MODE	Normal
Trick mode:	
TITLE	01/01
CHAPTER	02/14
AUDIO	01/03-OTH
SUBTITLE	01/01-OTH
ANGLE	01/01
T-TIME	00:02:48-00:51:25



2. Use the arrow buttons to select corresponding values according to your need, and press the “SELECT” button. The Process Control Item has the following values. Each value corresponds with an operation. Some discs might not contain all the values as follows.

Play, FFX2~FFx32 (The numbers indicate the speed of fast forward play),
Stop, FBx2~FBx32 (The numbers indicate the speed of fast backward play),
Pre-stop, Slow 1/2~ Slow 1/8(The fractions indicate the speed of slow play),
Pause,

Forward Play

1. Press the  button, the system will go forward to the next chapter (DVD) or the next track (VCD, etc.) and start playing.
For DVD discs, only the forward operation within a title is allowed.
2. Press the  button, and the system will play fast forward. With each press, the forward play speed will increase. For MUSIC discs, such operation is invalid.

Back Play

1. Press the  button of the remote control, the system will go back to the previous chapter (DVD) or the previous track (VCD, etc.) and start playing.
2. Press the  button, and the system will play fast backward. With each press, the backward play speed will reduce gradually.

Chapter Editing

Operation Steps

Select the title to be edited

1. Enter the Editing Mode.
2. In the Editing Mode control bar menu, use the ▼ or ▲ button to select the title.
- 3.Press the “SELECT” button to make title selection option editable.
- 4.Enter the number of the title to be edited with number buttons, and then press the “SELECT” button, the system will play the title. At this time, various operations can be done for this title.

Split Title

- 1.In the Editing Mode control bar menu, use the ▼ or ▲ button to split the title, and press the “SELECT” button.
- 2.When playing to a certain position, press the “SELECT” button, and the system begins to split the current chapter. The chapter is divided into two titles at this position, and the current picture will be the title picture of the second title. When the split operation is under way, you may need to wait for some time.

Chapter Marker

- 1.Insert a mark: Mark the chapter in the title.
- 2.Delete a mark: Delete a playing chapter and combine it with the previous chapter. But the previous chapter won’t be deleted
- 3.Delete all marks: Delete all chapters in the title. But the first chapter cannot be deleted.

Hide/Unhide Chapter

1. In the Chapter Editing control bar menu, use the ▼ or ▲ button to move the cursor and select the “Hide Chapter” item, and then press the “SELECT” button.
If the value is Hide Chapter, the current chapter will be hidden during playing.
If the value is Unhide Chapter, the current chapter will not be hidden during playing.

Index Picture

- 1.In the Program Mode control bar menu, use the ▼ or ▲ button to move the cursor and select the “Index Picture” item.
- 2.If you find a favorite picture during playing, press the “SELECT” button and the picture will become the index picture of the title.

Play

Play, Pause, FFX2, FFX4, FFX16, FFX32, FBx2, FBx4, FBx16, FBx32, Slow 1/2, Slow 1/4, Slow 1/8, Step.

Exit the Chapter Editing

- Press the “STOP” button to exit this mode.
When exiting, the system will write information to the disc. So the system might not respond for some time.

Editing Mode	
	Title: 04/04
	Chapter: 01/01
	Play
	Chapter marker
	Hide Chapter
	Index picture
	Split title
	Time: 0: 00: 02

HDD Editing

HDD Edit

Five operations are possible. All can be accessed from the Title list menu. Press Right ARROW to get the Popup menu. Then use the Up or Down ARROW to highlight your option and press Select to continue. Your options are: play, Delete, Split, Segment and Rename. During HDD Edit operation, recording to HDD is on going.


When you Edit a title, its corresponding representation on the HDD title list will bear the Edit icon to remind You.

Delete

If a title is not Protected or Locked, you can select this option to delete it. You should take extra care confirm the operation (as it is irreversible).

Split

This option brings up the Split screen. You can navigate to the program (similar to Playback screen) and mark a location at which the program will be cut into 2 separate programs and registered on the HDD title list. See Figure.

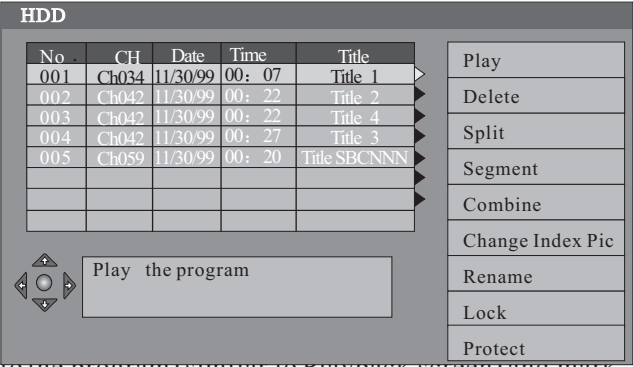

You can use all navigation features, (press DISPLAY to bring up the hot keys on the bottom of the screen, pressing DISPLAY again will remove the help information).

Note: Split is irreversible. Once the program has been split, the 2 titles can not be concatenated back.

Note: Split screen can only be accessed if the title you want to split is not Protected or Locked.

-Return Key will return back to HDD title list without splitting

-If the splitting point is not chosen and the title playback comes to an end, then the system will switch to Pause
-When the operation is finished, the system will return back to title list and the first part of the program will be highlighted

Before splitting, you will be asked if you want to proceed with splitting. (The default answer is No, in order to minimize error risk).

Note: Accuracy of Split location is within 0.5 second

Segment

This option brings up the Segment screen. You can navigate the program (similar to Playback screen) and mark a location for the beginning of a segment followed by a location for the end of a segment. The segments will not be visible if the title is played back (HDD-> Play). Also the segments will not be copied to DVD if the segmented title is selected for Dubbing. If you re-enter the segment screen for the same title, you can see the identified segments. See Figure.

Combine:

With the remote control highlight one program on the HDD title list, bring up the pop up menu by pressing the ► arrow button, select the COMBINE option, on the unit prompt: Combine this program with another, press ENTER button, the selected program title is hidden. Then with the remote control select another title to be combined, and press ENTER, Press return to cancel.

Note: It is possible to combine two MPEG-2 or MPEG-1 video titles that have been recorded by the same recorder, after being combined, the two titles on the title list will be replaced by only one title.

Play Mode

Program Play

This function enables the system to play designated title, chapter or track according to the instruction you set.

1. Select the Play Mode Control value as “Program” , and press the “SELECT” button.

- Press the ◀ or ▶ button to move the cursor between “File” and “Favorite/Program” .

- Press the ▲ or ▼ button to move the cursor up and down within a certain list box.


1) In the Program Play List Box, you can add your favorite content.

2) This is the Disc Content List Box.

2. Press arrow buttons to move the cursor in the Disc Content List Box to your favorite item.

3. Press the “ADD/CLEAR” button and the item will appear in the Program List Box.

If the item you select in the Disc Content List Box contains sub items, such as a title of a DVD disc, press the “SELECT” button and the sub item list will pop up in the Content List Box. If you select the first item in the list, press the “SELECT” button and the Content List Box will restore its original content. For detailed operations, see the following charts

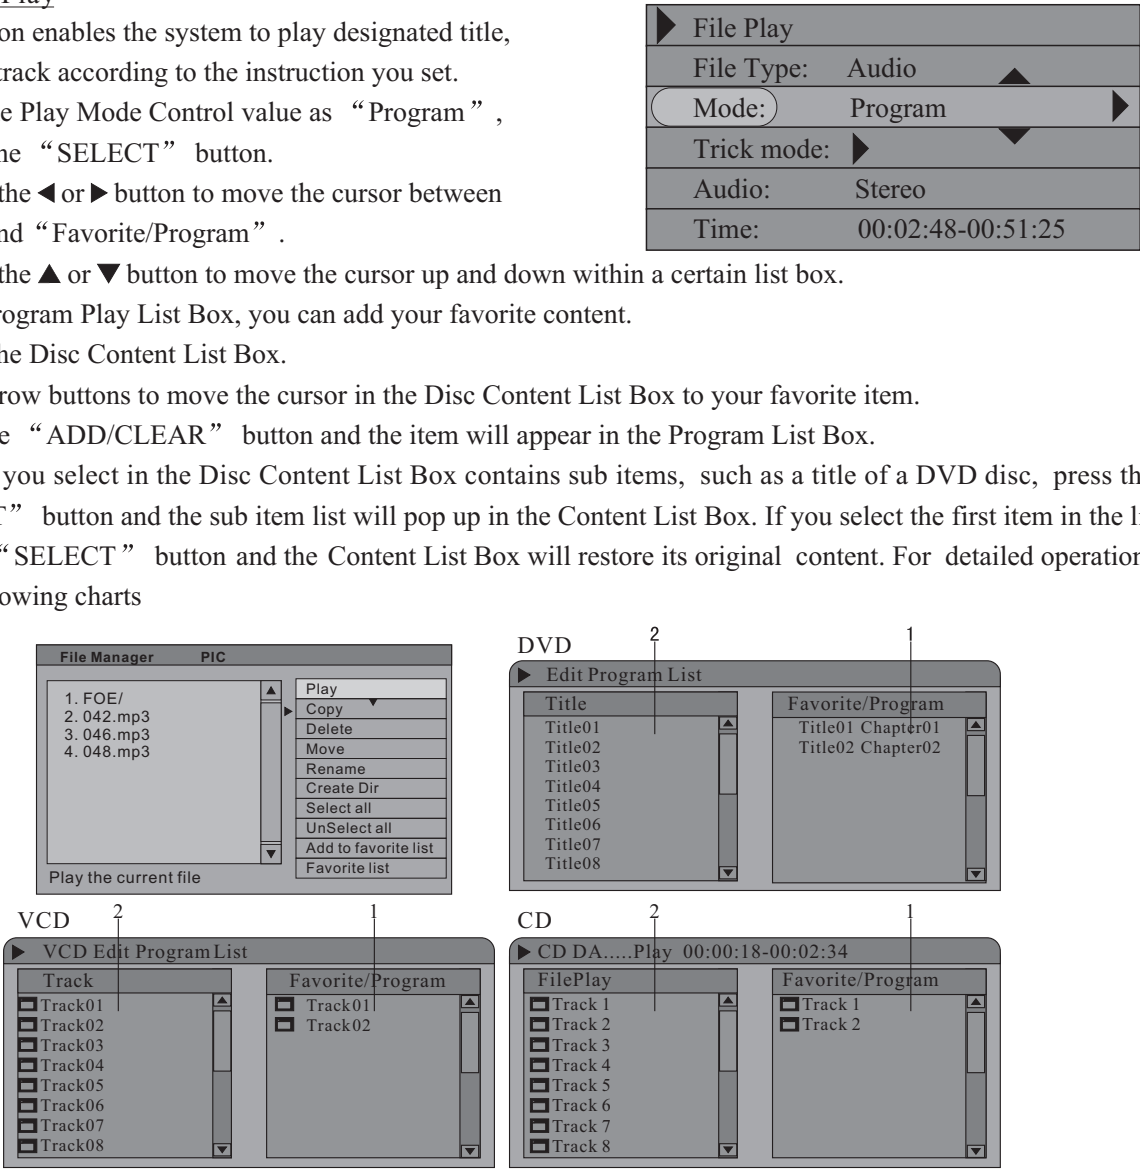

4. Press the arrow buttons to select an item in the Program List Box, and press the “ADD/CLEAR” button to delete the item.

- After adding the content you desired to the Program List Box, move the cursor to the Program List Box, and press the “SELECT” or “PLAY” button. The system then will play the content in the Program List Box in Normal Play mode.

Random Play

1. Set the value of the menu control item as “Random” . The system will start Random Play.

2. In this mode, the system will randomly play the chapters or tracks of the disc.

Play Mode

Play Mode Control

There are four playing modes for the unit, including Normal Play, Repeat Play, Program Play and Random Play. The operations are as follows.

Normal Play

1. Press the “DISPLAY” button to enter the control bar menu.
2. Press the ▼, ▲ and “SELECT” buttons to select the first item in the control bar, Play Mode.

Play a DVD

DVD	
MODE:	Normal ▶
Trick mode:	▶
TITLE:	01/01
CHAPTER:	02/14
AUDIO:	01/03-OTH
SUBTITLE:	01/03-OTH
ANGLE:	01/01
T-TIME:	00:02:04-00:51:25

3. Press the ▼ or ▲ button to select the Normal Play value, and then press the “SELECT” button to enter the Normal Play mode.
4. Pressing the “PLAY” button directly is another way preform Normal Play.

Repeat Play


There are various Repeat Play modes, including Repeat Title (DVD only), Repeat Chapter (DVD only), Repeat Disc (DVD/SVCD/VCD), A-B Repeat, etc.

1. In the play control bar menu, press the ▼, ▲ and “SELECT” buttons to select the first item, Play Mode Control.
2. Use ▼ or ▲ button to select a proper value, press the “SELECT” button and the system will play with the corresponding Repeat Play mode.
3. Pressing the “REPEAT” button directly is another way to repeat play operation.
4. If the value selected is “A-B Repeat”, press the “SELECT” button and the system will indicate that Point A is set, please set the next point. Press the “SELECT” button again to set the next point, i.e. Point B. After that, the system will perform a section repeat play, that is, repeat from A to B.

The values of Play Mode Control Item are as follows. The values may vary for different discs.

- | | | |
|-------------------|-----------------|-------------------|
| 1. Normal Play. | 4. Title Repeat | 7. DIR Repeat |
| 2. A-B Repeat | 5. Disc Repeat | 8. Program Repeat |
| 3. Chapter Repeat | 6. Track Repeat | 9. Random Repeat |

HDD Editing

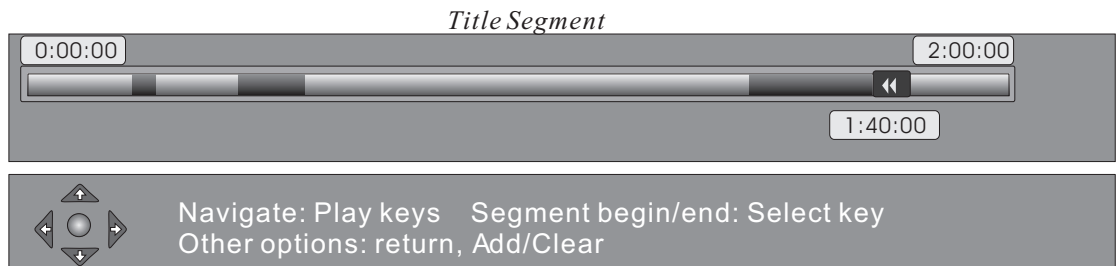


When you enter Segment screen, the title will automatically starts playing. You can use the playback navigation keys to move to anywhere in the title and apply a segment. The following remote control keys are supported:

Keys	Function	Note
Select	Mark the In/Out point(s).	Define your segments
Display	Toggles between: progress bar -> add helper text (and dynamic compass) -> add title info (on the top) -> no overlay	
Return	Back to HDD title list	<i>If all segments are chosen correctly (i.e. there is a corresponding Segment End for each Segment begin, the result should be saved before going to HDD title list. Or it will not save the result.</i>
Add/Clear	Clear all IN/OUT point	
Play	Navigation in the title	All playback and trick mode keys (FF, FR, etc)
Stop	Back to title list	Do not save the result

Note: Segment screen can only be accessed if the title you want to split is not Protected or Locked.
Note: Accuracy of segment boundaries is within 0.5 second

Change Index Picture

This option brings up the Change Index Picture screen. You can navigate the program (similar to Playback screen) and when the desired picture is display on the screen press **Select** to change the Index picture.

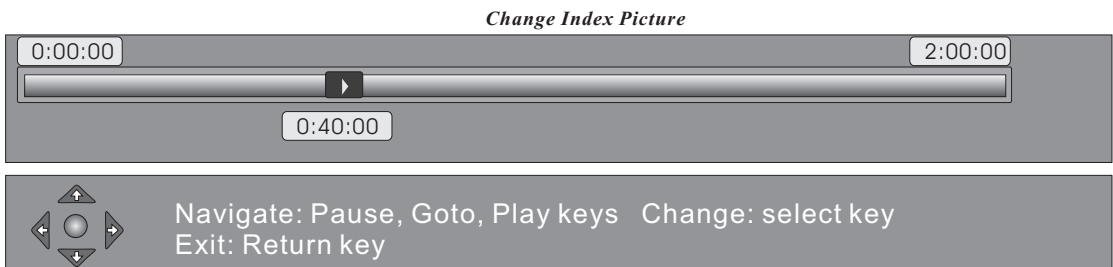

Note: This operation is available only if the title is not protected or locked

Rename

This option brings up the on-screen keyboard. You can type in the title name for the title. Use the **ARROWS** to highlight the desired key, and use **SELECT** to select.

On-screen keyboard



Note: This operation is allowed only if the title is not protected or locked

Lock

Once you have highlighted the program on the HDD title list, bring up the Popup menu by pressing the Right Arrow. Make sure Lock is highlighted (use Up and Down arrows to navigate if needed) and press Select. When you lock a program, the parental password selected in the Setup menu will be applied(*default value is 3308*). The user will be asked to Unlock the program before Play or any Edit or Dubbing operation. In order to Unlock, once you have highlighted the program on the HDD title list, bring up the Popup menu by pressing the Right Arrow. Make sure Unlock is highlighted (use Up and Down arrows to navigate if needed) and press Select. You will be regusted to enter the password. A Locked title will have a Lock icon next to its index picture on HDD title list.

Protect

Playback only, No Editing

Once you have highlighted the program on the HDD title list, bring up the Popup menu by pressing the Right Arrow. Make sure Protect is highlighted (use Up and Down arrows to navigate if needed) and press Select. When you Protect a program, the user can Play the title or Dub it to DVD; but can not do any Edit operation (split, segment, delete). In order to Unprotect, once you have highlighted the program on the HDD title list, bring up the Popup menu by pressing the Right Arrow. Make sure Unprotect is highlighted (use Up and Down arrows to navigate if needed) and press Select. A Protected title will have a Safe Box icon next to its index picture on HDD title list.

Enter the Title before Playing

1. This function is only available with DVD discs.
Press the “MENU” button, and the title directories will appear on the screen.
2. Press the arrow buttons to move the cursor to a desired title. For some discs, you can input numbers to select a title directly. For example, to select Title 2, press 2; to select Title 20, press 20.
3. Press the “SELECT” button to play the selected title.



Note:

Title directories of different DVD discs may vary to some extent.
Some DVD discs might not have any ttle directory. For such discs, it is no use pressing the “SELECT” button.

Enter Menu before Playing

1. Press the “MENU” button.
The Menu Picture of the DVD disc will be displayed on the TV screen.
For SVCD and VCD discs, this button realizes PBC ON/OFF function.
This function realizes only in the Pre-stop status for some discs.
2. For DVD discs, press the arrow buttons to select a chapter; for SVCD and VCD 2.0 discs, press the number buttons to select a track.
The “SELECT” button must be pressed before playing for some discs.
3. Press the “RETURN” button during playing.
For SVCD and VCD 2.0 discs, system will return to menu while PBC is on; the function will not be available while PBC is off.

End Play

1. Press the “STOP” button;
The system will change to the Pre-stop status.
In the Pre-stop status, the unit will automatically record the stopping time. Now if you press the “PLAY” or “RETURN” button, the unit will resume playing from the recorded stopping time. (For MUSIC discs, the playing will start from the beginning of the track at pre-stop time.) Press the “STOP” button again, the system will change to Stop status and the memory will be cleared then.
2. Press the “EJECT” button to open the disc tray.
3. Take out the disc.
4. Press the “EJECT” button to close the disc tray.
5. Press the “POWER” button to standby the unit.

Play Mode

The following charts are control bar menus for DVD, VCD, CD and MPEG 4 respectively. Please note that the menu may vary to some extent for different discs.

The meanings for the icons are as follows.

1. This icon shows the disc type.
2. **MODE.** Options include Normal Play, A-B Repeat , Chapter Repeat , Title Repeat , Disc Repeat, Program Play, etc.
3. **TRICK.** Options include Play, Stop, Pre-stop, Pause, FF/FB, Slow, etc.
4. **TITLE.** The DVD title being played and the total number of titles.
5. **CHAPTER.** The chapter of the DVD title being played and the total number of chapters.
6. **AUDIO.** Select the DVD Audio.
7. **SUBTITLE.** Select the DVD subtitle.
8. **ANGLE.** Select the DVD shooting angle.
9. **T-TIME.** Displays the time played and left.
10. **TRACK.** Track being played of the VCD/CD and the total number of tracks.
11. **AUDIO.** Channel selection when playing VCD, CD.
12. **PBC ON/OFF.** Play menu control. This function is available only for 2.0 and above versions.
- 13.**File Type:**Such as Audio,PIC(picture),Video.
- 14.**LANGU:** only for MPEG 4 play, select the language.

Play a DVD		
1	DVD	
2	MODE: Normal	Normal
3	Trick mode:	A-B Repeat
4	TITLE: 01/01	Chapter Repeat
5	CHAPTER: 02/14	Title Repeat
6	AUDIO: 01/03-OTH	Program
7	SUBTITLE: 01/03-OTH	
8	ANGLE: 01/01	
9	T-TIME: 00:02:04-00:51:25	

Play a VCD		
1	VCD	
2	MODE: Normal	Normal
3	Trick mode :	A-B Repeat
10	Track: 01/01	Track Repeat
11	Audio: Stereo	Disc Repeat
12	PBC: PBC ON	Program
9	TIME: 00:02:04-00:51:25	Random

Play a MPEG 4		
1	File play	
13	File Type: AUDIO	Normal
3	MODE: Normal	Repeat Track
3	Trick mode:	Repeat DIR
11	AUDIO: Stereo	Disc Repeat
9	TIME: 00:02:48-00:51:25	Program
14	LANGU Language 1	Random
		Intro Play

Play a CD		
1	CDDA PLAY	
13	File Type: AUDIO	Normal
3	MODE: Normal play	A-B Track
3	Trick mode:	Track Repeat
11	AUDIO: Stereo	Program
9	TIME: 00:02:48-00:51:25	

Operation

Direct Play

1. Press the “EJECT” button to open the disc tray.
2. Insert the available disc.
3. Do not put the disc upside-down. The smooth side should face downward, while the printed side should face upward.

Press the “EJECT” button to close the disc tray. The system will start playing.

Disc Operation

Introduction

The Disc Operation means operations done to recordable discs in the drive, including browsing disc information, finalizing a disc, removing disc content, deleting the last title, setting compatibility and write protection, etc.

Enter the Disc Operation Mode

Press DVD button, the unit read out the title menu for DVD±R/RW disc, press the▲button move cursor to top of title menu, than press the▶ button to display the disc operation menu by the remote controller.

Menu Description

The control bar menu under this mode is as shown in the chart.

The meanings for the icons are as follows.

1. Play: Play the content of the current disc.
2. Rename Disc: Rename the disc (default name: MY DVD).
3. Erase Optical Disc: Once this operation is done, all content in the disc will be removed completely. The disc index will appear as blank on the screen. (Only for DVD±RW disc).
4. Record a new title: Add a new title to record.
5. Overwrite Disc: An operation on a recorded DVD+RW disc to overwrite its previous content(Only for DVD±RW disc).
6. Lock Disc:.. This function prevents the deletion of recorded content. (Only for DVD±RW disc)
7. Copy All: This function is select all subtitle.
- 8.Finalize Disc:This operation enables the recorded DVD±R/-RW discs to be played in other DVD players. You cannot add new content to such discs.

Operation Steps

Erase Optical Disc

This operation is effective for DVD±RW discs. In the Disc Operation control bar menu, use the ▼ or ▲ button to select the “Erase Optical Disc” option, press the “SELECT” button and a warning message pops up, “This operation will erase all data on the disc. Are you sure you want to continue” . Press the ◀ button to select “Yes” , and then press the “SELECT” button to confirm. Then the system will start erasing the disc.

The Erase Disc operation may take some time. During the operation, do not conduct any other operation, including standby; once the operation starts, it cannot be cancelled midway. Never switch off the power during the operation; otherwise the disc may be damaged.

Lock Disc

This operation will cancel the write protection of a locked disc. This function is available only for DVD±RW discs.

1. In the Disc Operation control bar menu, use the ▼ or ▲ button to select the “Lock Disc” item, and then press the “SELECT” button.

To judge if a disc is write-protected, try the “Browse Disc Information” operation. A write-protected disc cannot be recorded, erased or edited unless the write protection is canceled.

DVD+RW:

1	Play
2	Rename Disc
3	Erase Optical Disc
4	Record a New Title
5	Overwrite Disc
6	Lock Disc
7	Copy All

DVD-RW:

	Play
	Rename Disc
	Erase Optical Disc
	Record a New Title
	Overwrite Disc
8	Finalize Disc
	Lock Disc
	Copy All

DVD+RW:

	Play
	Rename Disc
	Erase Optical Disc
	Record a New Title
	Overwrite Disc
	Lock Disc
	Copy All

Disc Operation

Rename Disc

In the Disc Operation control bar menu, use the ▼ or ▲ button to select the “Rename Disc” item, and press the “SELECT” button to pop up a dialog box; in the given keyboard layout, use arrow buttons and the “SELECT” button to enter desired letters.

Space: add a blank position, **Caps:** capital change, **BkSp:** delete a character forward, **Delete:** delete a character backward, **Clear:** delete all characters, **Exit:** exit operation, **OK:** confirm operation.



Record a New Title

In the Disc Operation control bar menu, use the ▼ or ▲ button to select the “Record a New Title” item, press the “SELECT” button, and then the system will change to TV status. Press the “SOURCE” button to switch to other input sources. Press the “REC/OTR” button to enter a new title. Other operations are similar to those in Manual Recording.

Overwrite Disc

In the Disc Operation control bar menu, use the ▼ or ▲ button to select the “Overwrite Disc” item, press the “SELECT” button, and then the system will change to TV status. Press the “SOURCE” button to switch to other input sources, and then press the “REC/OTR” button to start recording and overwriting all other information in the disc. Other operations are similar to those in Manual Recording.

Finalize Disc

In the Disc Operation menu. Use the▲ or ▼ button to select the “Finalize” item, press the “SELECT” button to confirm, the compatibility process will be under way.

- This operation enables the recorded DVD±R/-RW discs to be played in other DVD players. You cannot add new content to such discs.
- Do not switch off the power during the finalizing process, otherwise the discs might be damaged.
- For the DVD+RW disc, after recording, it can be played in the DVD player directly, no need to finalize

Exit:

Press the “◀” button to exit this mode.

DVD+RW:

Play
Rename Disc
Erase Optical Disc
Record a New Title
Overwrite Disc
Lock Disc
Copy All

DVD+RW:

Play
Rename Disc
Erase Optical Disc
Record a New Title
Overwrite Disc
Lock Disc
Copy All

DVD+RW:

Play
Rename Disc
Erase Optical Disc
Record a New Title
Overwrite Disc
Lock Disc
Copy All

DVD+R:

Play
Rename
Record a title
Finalize
Copy All

DVD-RW:

Play
Rename Disc
Erase Optical Disc
Record a New Title
Overwrite Disc
Finalize Disc
Lock Disc
Copy All

Title Editing

Introduction

Different recorded programs make different titles. The titles may be edited

Enter the Title Editing Mode

In the Title Display mode, press the ► button to pop up the following dialog box.



- | | | |
|-------------|---|------------------------------------|
| 1. TITLE | 1 | 1. Title Name. |
| 01/04/2004 | 2 | 2. Recording Date. |
| 13:09:58 | 3 | 3. Starting Time of the Recording. |
| SP 00:01:00 | 4 | 4. The Length of the Recording. |
| | 5 | 5. Recording Quality. |

Play TITLE	1	1. Play Title. Play the current title.
Edit TITLE	2	2. Edit Title. Enter the Title Editing mode, similar to the Chapter Editing mode.
Rename TITLE	3	3. Rename Title. The operation is the same as that for “Rename Disc”.
Erase TITLE	4	4. Erase Title. Delete the current title.
Overwrite TITLE	5	5. Overwrite Title. Record a new title and overwrite the current one.
Overwrite TITLE	6	6. Overwrite Disc. Operation same as disc operation of the overwrite Disc Operation.
Append TITLE	7	7. Append Title. This function is only available when editing the last title in the disc. Add a new title. The operation is the same as that in “Record a New Title”
Copy	8	8. Copy. Copy the title to the HDD.

Play Mode

Enter the Play Mode

Press the remote control DVD button switch to DVD playback mode. In the Play Mode, the unit serves as a high quality DVD player. To enter the Play Mode, do as follows.

- Connect the TV and the unit properly (See “System Connection” for relevant information). Turn on the TV and switch to AV input status.
- Switch on the power of the unit, and press the “POWER” button to start the unit. Insert a disc, and the system will enter the Play Mode automatically.
- If the unit is working with other inputs, press the “PLAY” button to enter the Play Mode.

Note:

- During Writing or Erasing operation, it is no use pressing the “PLAY” button.
- If there is no disc in the drive or an unsupported or seriously damaged disc is inserted, it is no use pressing the “PLAY” button.

Menu Description

In the Play Mode, the system control is done through the menu operations or function keys. Enter the Play Mode, and press the “DISPLAY” button to show or hide the control bar menu.

In the Stop status, it is no use pressing the “DISPLAY” button.